## Juno<sup>™</sup> Velocity & Torque Control IC MC78113 Electrical Specifications



Performance Motion Devices, Inc. 1 Technology Park Drive Westford, MA 01886

## NOTICE

This document contains proprietary and confidential information of Performance Motion Devices, Inc., and is protected by federal copyright law. The contents of this document may not be disclosed to third parties, translated, copied, or duplicated in any form, in whole or in part, without the express written permission of Performance Motion Devices, Inc.

The information contained in this document is subject to change without notice. No part of this document may be reproduced or transmitted in any form, by any means, electronic or mechanical, for any purpose, without the express written permission of Performance Motion Devices, Inc.

Copyright 1998-2020 by Performance Motion Devices, Inc.

Juno, ATLAS, Magellan, ION, Prodigy, Pro-Motion, C-Motion, and VB-Motion are registered trademarks of Performance Motion Devices, Inc.

### Warranty

Performance Motion Devices, Inc. warrants that its products shall substantially comply with the specifications applicable at the time of sale, provided that this warranty does not extend to any use of any Performance Motion Devices, Inc. product in an Unauthorized Application (as defined below). Except as specifically provided in this paragraph, each Performance Motion Devices, Inc. product is provided "as is" and without warranty of any type, including without limitation implied warranties of merchantability and fitness for any particular purpose.

Performance Motion Devices, Inc. reserves the right to modify its products, and to discontinue any product or service, without notice and advises customers to obtain the latest version of relevant information (including without limitation product specifications) before placing orders to verify the performance capabilities of the products being purchased. All products are sold subject to the terms and conditions of sale supplied at the time of order acknowledgment, including those pertaining to warranty, patent infringement and limitation of liability.

## **Unauthorized Applications**

Performance Motion Devices, Inc. products are not designed, approved or warranted for use in any application where failure of the Performance Motion Devices, Inc. product could result in death, personal injury or significant property or environmental damage (each, an "Unauthorized Application"). By way of example and not limitation, a life support system, an aircraft control system and a motor vehicle control system would all be considered "Unauthorized Applications" and use of a Performance Motion Devices, Inc. product in such a system would not be warranted or approved by Performance Motion Devices, Inc.

By using any Performance Motion Devices, Inc. product in connection with an Unauthorized Application, the customer agrees to defend, indemnify and hold harmless Performance Motion Devices, Inc., its officers, directors, employees and agents, from and against any and all claims, losses, liabilities, damages, costs and expenses, including without limitation reasonable attorneys' fees, (collectively, "Damages") arising out of or relating to such use, including without limitation any Damages arising out of the failure of the Performance Motion Devices, Inc. product to conform to specifications.

In order to minimize risks associated with the customer's applications, adequate design and operating safeguards must be provided by the customer to minimize inherent procedural hazards.

## Disclaimer

Performance Motion Devices, Inc. assumes no liability for applications assistance or customer product design. Performance Motion Devices, Inc. does not warrant or represent that any license, either express or implied, is granted under any patent right, copyright, mask work right, or other intellectual property right of Performance Motion Devices, Inc. covering or relating to any combination, machine, or process in which such products or services might be or are used. Performance Motion Devices, Inc.'s publication of information regarding any third party's products or services does not constitute Performance Motion Devices, Inc.'s approval, warranty or endorsement thereof.

### Patents

Performance Motion Devices, Inc. may have patents or pending patent applications, trademarks, copyrights, or other intellectual property rights that relate to the presented subject matter. The furnishing of documents and other materials and information does not provide any license, express or implied, by estoppel or otherwise, to any such patents, trademarks, copyrights, or other intellectual property rights.

Patents and/or pending patent applications of Performance Motion Devices, Inc. are listed at <u>https://www.pmdcorp.com/company/patents</u>.

#### **Related Documents**

#### Juno Velocity & Torque Control IC User Guide

Complete description of the Juno Velocity & Torque Control IC family features and functions with detailed theory of operations.

#### Juno Velocity & Torque Control IC Programming Reference

Description of all Juno family IC commands, with coding syntax and examples, listed alphabetically for quick reference.

#### DK78113 Developer Kit User Manual

How to install and configure the DK78113 Developer Kit. This developer kit supports all 64-pin TQFP Juno ICs including MC71112, MC73112, MC71113, MC73113, MC74113, MC75113, and MC78113.

#### Juno Torque Control IC User Guide

Complete description of the MC71112, MC71112N, MC73112 and MC73112N Juno torque control ICs including electrical characteristics, pin descriptions, and theory of operations.

#### DK73112N Developer Kit User Manual

How to install and configure the DK73112N Developer Kit. This developer kit supports the two 56-pin VQFN Juno torque control ICs; MC71112N and MC73112N.

#### Juno Step Motor Control IC User Guide

Complete description of the MC74113, MC74113N, MC75113 and MC75113N step motor control ICs including electrical characteristics, pin descriptions, and theory of operations.

#### DK74113N Developer Kit User Manual

How to install and configure the DK74113N developer kit. This developer kit supports the two 56-pin VQFN Juno step motor control ICs; MC74113N and MC75113N.

# **Table of Contents**

| 1.         | The Juno IC Family                                      | 9        |
|------------|---|----------|
| 1.1        | Introduction  | 9        |
| 1.2        | Family Overview   | 10       |
| 1.3        | Juno IC Developer Kits                                  | 11       |
| 1.4        | Guide to the Documentation                              | 12       |
| 2.         | Functional Characteristics                              | . 13     |
| 2.1        | Configurations, Parameters, and Performance             | 13       |
| 2.2        | Physical Dimensions, 64-PIN TQFP Package                | 15       |
| 2.3        | Physical Dimensions, 56-PIN VQFN Package                | 16       |
| 2.4        | Absolute Maximum Environmental and Electrical Ratings1  | 17       |
| 3.         | Electrical Characteristics                              | . 19     |
| 3.1        | DC Characteristics for Juno ICs                         | 19       |
| 3.2        | AC Characteristics                                      | 20       |
| 4.         | Timing Diagrams   | . 23     |
| 4.1        | Clock   | 23       |
| 4.2        | Quadrature Encoder Input                                | 23       |
| 4.3        | SPI Timing  | 24       |
| 4.4        | Power On Timing   | 24       |
| 4.5        | Warm Reset  | 25       |
| 4.6        | Pulse & Direction                                       | 25       |
| 5.         | Pinouts and Pin Descriptions                            | . 27     |
| 5.1        | Pinouts for the MC78113                                 | 28       |
| 5.2        | Pinouts for the MC71112                                 | 29       |
| 5.3        | Pinouts for the MC71112N                                | 30       |
| 5.4        | Pinouts for the MC/3112                                 | 31       |
| 5.5        | Pinouts for the MC73112N                                | 32       |
| 5.0<br>5.7 | Pinouts for the MC71113                                 | دد<br>۲۲ |
| 5.7<br>5.8 | Pinouts for the MC74113                                 | 54       |
| 5.9        | Pinouts for the MC74113N                                | 36       |
| 5.10       | Pinouts for the MC75113                                 | 37       |
| 5.11       | Pinouts for the MC75113N                                | 38       |
| 5.12       | 2 Juno IC Pin Descriptions                              | 39       |
| 6.         | Juno IC Configuration in the Production Application     | . 43     |
| 6.1        | Loading the NVRAM                                       | 43       |
| 6.2        | Analog Signal Calibration in the Production Application | 44       |
| 7.         | Electrical Operational Information                      | . 47     |
| 7.1        | Juno ICs Connection Overview                            | 48       |
| 7.2        | Internal Block Diagram                                  | 49       |
| 7.3        | Switching Amplifier Control                             | 49       |
| 7.4        | Current Control   | 59       |
| 7.5        | Drive & DC Bus Safety                                   | 61       |
| 7.6        | Host Communications                                     | 67       |

| 7.7  | Input Signal Processing 69                                  |
|------|---|
| 7.8  | Reset   |
| 7.9  | Juno RAM and NVRAM 73                                       |
| 7.10 | Output Signal Status During Powerup74                       |
| 7.11 | Analog Signal Input   |
| 8. A | Application Notes — MC7811377                               |
| 8.1  | General Design Notes  |
| 8.2  | Design Tips   |
| 8.3  | Power Supplies  |
| 8.4  | Clock Generator, Grounding and Decoupling 82                |
| 8.5  | Reset Signal  |
| 8.6  | Serial Communication Interface (SCI)                        |
| 8.7  | CAN Communication Interface                                 |
| 8.8  | SPI Communication Interface                                 |
| 8.9  | Analog Inputs   |
| 8.10 | Drive-Related Safety and Monitoring Features                |
| 8.11 | Shunt Resistor Drive  |
| 8.12 | PWM High/Low Motor Drive With Leg Current Sensing/Control   |
| 8.13 | Using the TI LMD18200 to Drive DC Brush Motors              |
| 8.14 | Two Juno Step Motor Amplifiers With Multi-Axis Magellan 114 |
| 8.15 | Two Juno BLDC Motor Amplifiers With Multi-Axis Magellan 116 |

# **List of Figures**

| 2-1  | 64-Pin TQFP Physical Dimensions                    | 15 |
|------|--|----|
| 2-2  | 56-Pin VQFN Physical Dimensions                    | 16 |
| 4-1  | Clock Timing                                       | 23 |
| 4-2  | Quad Encoder Timing                                | 23 |
| 4-3  | SPI Timing   | 24 |
| 4-4  | Power On Timing                                    | 24 |
| 4-5  | Warm Reset Timing                                  | 25 |
| 4-6  | Pulse & Direction Timing                           | 25 |
| 5-1  | MC78113 Pinouts                                    | 28 |
| 5-2  | MC71112 Pinouts                                    | 29 |
| 5-3  | MC71112N Pinouts                                   | 30 |
| 5-4  | MC73112 Pinouts                                    | 31 |
| 5-5  | MC73112N Pinouts                                   | 32 |
| 5-6  | MC71113 Pinouts                                    | 33 |
| 5-7  | MC73113 Pinouts                                    | 34 |
| 5-8  | MC74113 Pinouts                                    | 35 |
| 5-9  | MC74113N Pinouts                                   | 36 |
| 5-10 | MC75113 Pinouts                                    | 37 |
| 5-11 | MC75113N Pinouts                                   | 38 |
| 6-1  | NVRAM Programming Via 3-pin UART Programming Cable | 44 |
| 7-1  | Juno Interconnections                              | 48 |
| 7-2  | Juno ICs Internal Block Diagram                    | 49 |
| 7-3  | PWM High/Low Encoding                              | 50 |
| 7-4  | PWM High/Low Signal Generation                     | 50 |
| 7-5  | Brushless DC Motor Bridge Configuration            | 51 |
| 7-6  | DC Brush Motor Bridge Configuration                | 52 |
| 7-7  | Two-phase Step Motor Bridge Configuration          | 53 |
| 7-8  | Sign/Magnitude PWM Encoding                        | 55 |
| 7-9  | Sign/Magnitude PWM DC Brush Motor Connections      | 56 |
| 7-10 | Sign/Magnitude PWM Step Motor Connections          | 57 |
| 7-11 | Typical Current Signal Processing Circuitry        | 59 |
| 7-12 | Over-temperature Processing Circuitry              | 62 |
| 7-13 | Overcurrent Monitoring Circuitry                   | 63 |
| 7-14 | DC Bus Monitoring Circuitry                        | 64 |
| 7-15 | Quadrature Encoder Processing Circuitry            | 69 |
| 7-16 | Pulse & Direction Processing Circuitry             | 70 |
| 7-17 | Typical Hall Processing Circuitry                  | 71 |
| 7-18 | AnalogCmd and Tachometer Circuitry                 | 72 |
| 7-19 | Typical Reset Processing Circuitry                 | 73 |
| 8-1  | Basics, Power Supplies, MC78113                    | 81 |
| 8-2  | Basics, Clock and Bypass Caps, MC78113             | 83 |
| 8-3  | Host Communication, RS-232 and RS-485              | 87 |
| 8-4  | Host Communication CANbus                          | 89 |
| 8-5  | Host Communication SPI                             | 91 |
| 8-6  | Analog Input Interface                             | 93 |
| 8-7  | Drive Safety and Monitoring                        | 95 |
| 8-8  | Shunt Drive Circuit                                | 97 |

| 8-9  | Leg Current Sensing                                | 100 |
|------|--|-----|
| 8-10 | Low Cost DC Drive with Leg Current Sensing         | 103 |
| 8-11 | Step Motor Drive with Leg Current Sensing          | 105 |
| 8-12 | BLDC Motor Drive - Leg Current Sensing             | 107 |
| 8-13 | BLDC Motor Drive - Power Train                     | 108 |
| 8-14 | BLDC Drive with Intelligent Power Module           | 111 |
| 8-15 | DC Brush Amplifier Using LMD 18200                 | 113 |
| 8-16 | Two-Axis Step Motor Drive With Multi-Axis Magellan | 115 |
| 8-17 | Two-Axis BLDC Motor Drive With Multi-Axis Magellan | 117 |

# 1. The Juno IC Family

#### In This Chapter

Introduction

- Family Overview
- Juno IC Developer Kit
- Guide to the Documentation

## 1.1 Introduction

This manual provides electrical specifications for the complete Juno family of velocity & torque control ICs from Performance Motion Devices, Inc. The Juno IC family consists of the MC71113, MC73113, and MC78113 ICs for velocity control of Brushless DC and DC Brush motors, the MC74113, MC74113N, MC75113, and MC75113N ICs for control of step motors, and the MC71112, MC71112N, MC73112, and MC73112N ICs for torque control of Brushless DC and DC Brush motors.

PMD's Juno ICs are ideal for a wide range of applications including precision liquid pumping, laboratory automation, scientific automation, flow rate control, pressure control, high speed spindle control, and many other robotic, scientific, and industrial applications.

The Juno family provides full four quadrant motor control and directly inputs quadrature encoder, index, and Hall sensor signals. It interfaces to external bridge-type switching amplifiers utilizing PMD's proprietary current and switch signal technology for ultra smooth, ultra quiet motor operation.

Juno ICs can be pre-configured via NVRAM for auto power-up initialization and standalone operation with SPI (Serial Peripheral Interface), direct analog, or pulse & direction command input. Alternatively Juno can interface via SPI, point-to-point serial, multi-drop serial, or CANbus to a host microprocessor.

Internal profile generation provides acceleration and deceleration to a commanded velocity with 32-bit precision. Additional Juno features include performance trace, programmable event actions, FOC (field oriented control), microstep signal generation, and external shunt resistor control.

All Juno ICs are available in 64-pin TQFPs (Thin Quad Flat Packages) measuring 12.0 mm x 12.0 mm including leads. The step motor control ICs and torque control ICs are also available in 56-pin VQFN (Very thin Quad Flat Non-leaded) packages measuring 7.2 mm x 7.2 mm. These VQFN parts are denoted via a "N" suffix in the part number.

## 1.2 Family Overview

The following table summarizes the operating modes and control interfaces supported by the Juno IC family:

Note that the MC78113 IC allows the motor type to be selected by the user. It provides all of the operating modes indicated for the MC71113, MC73113, and MC74113 Juno ICs.

|                           | MC74113                      |              |              |              |              |
|---------------------------|------------------------------|--------------|--------------|--------------|--------------|
|                           | MC74113N                     |              |              |              |              |
|                           |                              | N/C71110     | NAC71112     | N/C72112     | N/072112     |
|                           | MC78113                      | MC71112N     | MC78113      | MC73112N     | MC78113      |
| Motor Type & Control M    | lode                         |              |              |              |              |
| Motor Type                | Step motor                   | DC Brush     | DC Brush     | Brushless DC | Brushless DC |
| Velocity                  |                              |              | $\checkmark$ |              | $\checkmark$ |
| Torque/current            | $\checkmark$                 | $\checkmark$ | $\checkmark$ | $\checkmark$ | $\checkmark$ |
| Position & outer loop     |                              |              | $\checkmark$ |              | $\checkmark$ |
| Host Interface            |                              |              |              |              |              |
| Serial point-to-point     | $\checkmark$                 | $\checkmark$ | $\checkmark$ | $\checkmark$ | $\checkmark$ |
| Serial multi-drop         |                              |              | $\checkmark$ |              | $\checkmark$ |
| SPI                       |                              |              | $\checkmark$ |              | $\checkmark$ |
| CANbus                    |                              |              | $\checkmark$ |              | $\checkmark$ |
| Command Input             |                              |              |              |              |              |
| Analog velocity or torque |                              | $\checkmark$ | $\checkmark$ | $\checkmark$ | $\checkmark$ |
| SPI velocity or torque    |                              | $\checkmark$ | $\checkmark$ | $\checkmark$ | $\checkmark$ |
| Pulse & direction         | $\checkmark$                 |              | $\checkmark$ |              | $\checkmark$ |
| SPI position increment    | $\checkmark$                 |              |              |              | $\checkmark$ |
| Motion I/O                |                              |              |              |              |              |
| Quadrature encoder input  | ✓ (MC74113 & MC74113 N only) |              | $\checkmark$ | $\checkmark$ | $\checkmark$ |
| Hall sensor input         |                              |              |              | $\checkmark$ | ✓            |
| Tachometer input          |                              |              | $\checkmark$ |              | ✓            |
| AtRest input              | $\checkmark$                 |              |              |              |              |
| FaultOut output           | $\checkmark$                 | $\checkmark$ | $\checkmark$ | $\checkmark$ | $\checkmark$ |
| HostInterrupt output      | $\checkmark$                 | $\checkmark$ | $\checkmark$ | $\checkmark$ | $\checkmark$ |
| Amplifier Control         |                              |              |              |              |              |
| PWM High/Low              | $\checkmark$                 | $\checkmark$ | $\checkmark$ | $\checkmark$ | $\checkmark$ |
| PWM Sign/Magnitude        | $\checkmark$                 | $\checkmark$ | $\checkmark$ |              |              |
| DC Bus & Safety           |                              |              |              |              |              |
| Shunt                     |                              | $\checkmark$ | $\checkmark$ | $\checkmark$ | $\checkmark$ |
| Overcurrent detect        | $\checkmark$                 | $\checkmark$ | $\checkmark$ | $\checkmark$ | $\checkmark$ |
| Over/undervoltage detect  | $\checkmark$                 | $\checkmark$ | $\checkmark$ | $\checkmark$ | $\checkmark$ |
| Temperature input         | $\checkmark$                 | $\checkmark$ | $\checkmark$ | $\checkmark$ | $\checkmark$ |
| Brake                     | $\checkmark$                 | $\checkmark$ | $\checkmark$ | ✓            | $\checkmark$ |

## 1.3 Juno IC Developer Kits

Three different Juno developer kits are available. All of the 64-pin TQFP package Juno ICs are supported via the DK78113 developer kit board. The DK part numbers differ in the specific type of Juno IC that is installed.

| Developer<br>Kit P/N | Juno IC<br>Installed | Motor supported                                     | Comments  |
|----------------------|----------------------|---|---|
| DK71112              | MC71112              | DC Brush  | Torque control  |
| DK71113              | MC71113              | DC Brush  | Velocity & torque control                                   |
| DK73112              | MC73112              | Brushless DC  | Torque control  |
| DK73113              | MC73113              | Brushless DC  | Velocity & torque control                                   |
| DK74113              | MC74113              | Step Motor  | Provides quadrature encoder input                           |
| DK75113              | MC75113              | Step Motor  | No quadrature encoder input                                 |
| DK78113              | MC78113              | Multi-motor (Brushless DC, DC<br>Brush, Step Motor) | Velocity & torque control with user-<br>settable motor type |
| DK78113S             | MC78113              | Multi-motor (Brushless DC, DC<br>Brush, Step Motor) | Socketed version of DK78113                                 |

The 56-pin VQFN IC package step motor ICs are supported by the DK74113N developer kit board. The DK part numbers differ in the specific type of Juno IC that is installed.

| Developer Kit<br>P/N | Juno IC<br>Installed | Motor<br>Supported | Comments                          |
|----------------------|----------------------|--------------------|-----------------------------------|
| DK74113N             | MC74113N             | Step Motor         | Provides quadrature encoder input |
| DK75113N             | MC75113N             | Step Motor         | No quadrature encoder input       |

The 56-pin VQFN IC package torque control ICs are supported by the DK73112N developer kit board. The DK part numbers differ in the specific type of Juno IC that is installed.

| Developer Kit | Juno IC   | Motor        |                |  |
|---------------|-----------|--------------|----------------|--|
| P/N           | Installed | Supported    | Comments       |  |
| DK71112N      | MC71112N  | DC Brush     | Torque control |  |
| DK73112N      | MC73112N  | Brushless DC | Torque control |  |

Each developer kit includes:

- · Standalone board with easy to access connectors for fast setup and testing
- · Pro-Motion autotuning and axis wizard setup software
- Complete Juno manual PDFs
- Extensive application schematic examples

## 1.4 Guide to the Documentation

The Juno IC family is notable for the number of different control functions provided and motor types supported. While there are five different manuals specific to the Juno ICs, for a given application you will often need just one, or a smaller number of user guides. This is detailed in the table below:

| Juno Function      | Primary Reference  | Companion References  |
|--------------------|--|---|
| Velocity Control   | Juno Velocity & Torque Control IC User   | MC78113 Electrical Specifications   |
|                    | entire Juno IC family.   | Juno velocity & Forque Control IC Programming Reference.  |
| Torque Control     | Juno Torque Control IC User Guide provides<br>a convenient all-in-one reference for the<br>Juno ICs that provide this dedicated<br>control function.     | Juno Velocity & Torque Control IC User Guide<br>Juno Velocity & Torque Control IC Programming Reference |
| Step Motor Control | Juno Step Motor Control IC User Guide<br>provides a convenient all-in-one<br>reference for the Juno ICs that provide<br>this dedicated control function. | Juno Velocity & Torque Control IC User Guide<br>Juno Velocity & Torque Control IC Programming Reference |

# **2. Functional Characteristics**

2

### In This Chapter

- Configurations, Parameters, and Performance
- Physical Dimensions, 64-PIN TQFP Package
- Physical Dimensions, 56-PIN VQFN Package
- Absolute Maximum Environmental and Electrical Ratings

## 2.1 Configurations, Parameters, and Performance

| Control command sources              | AnalogCmd  | Outer loop quantity, velocity, or torque command is provided via external direct analog input                                  |  |
|--------------------------------------|--|--|--|
|                                      | SPI  | Outer loop quantity, velocity, or torque command is<br>provided via external SPI (Serial Peripheral Interface)<br>direct input |  |
|                                      | Pulse & Direction  | Position is provided via external pulse & direction input  |  |
|                                      | Internal profile   | Outer loop quantity, position, velocity, or torque command is provided via internal profile generator function                 |  |
| Control feedback sources             | Quadrature encoder   | Position or velocity feedback is provided for the position/outer loop or velocity loop   |  |
|                                      | Hall sensors   | Position or velocity feedback is provided for the position/outer loop or velocity loop   |  |
|                                      | Tachometer   | Outer loop quantity or velocity feedback is provided for the outer loop or velocity loop                                       |  |
|                                      | SPI  | Outer loop quantity feedback is provided for the position/outer loop   |  |
| Host communication modes             | SPI (Serial Peripheral Interface)  |  |  |
|                                      | Point to point asynchro  | onous serial   |  |
|                                      | Multi-drop asynchrono  | bus serial   |  |
|                                      | CAN bus 2.0B   |  |  |
| Host SPI frequency range             | 1.0 MHz - 10.0 MHz   |  |  |
| Serial port baud rate range          | 1,200 baud to 460,800<br>230,400, 460,800)   | baud (1,200, 2,400, 9,600, 19,200, 57,600, 115,200,  |  |
| CAN port transmission rate range     | 10,000 baud to 1,000,000 baud (10,000, 20,000, 50,000, 125,000, 250,000, 500,000, 1,000,000) |  |  |
| Position range                       | -2,147,483,648 to +2,1   | 47,483,647 counts or steps   |  |
| Velocity range                       | -32,768 to +32,767 co  | unts or steps per cycle  |  |
|                                      | with a resolution of 1/65,536 counts or steps per cycle                                      |  |  |
| Acceleration and deceleration ranges | 0 to +127 counts or steps per cycle <sup>2</sup>   |  |  |
|                                      | with a resolution of I/  | 16,777,216 counts or steps per cycle <sup>2</sup>  |  |
|                                      |  | · · ·  |  |

| Motor output modes                             | PWM High/Low                                 | Individual high and low drive signals for each bridge switch                 |  |
|--|--|--|--|
|  | Sign/Magnitude PWM                           | Separate sign and magnitude drive signal for each phase of switching bridge. |  |
| Commutation rate                               | 19.53 kHz except MC731                       | 12 and MC73112N which is 39.06 kHz   |  |
| Current loop rate                              | 19.53 kHz                                    |  |  |
| Current measurement resolution                 | 12 bits                                      |  |  |
| PWM resolution & rates                         | 1:1,536 @ 20 kHz                             |  |  |
|  | l:768 @ 40 kHz                               |  |  |
|  | l:384 @ 80 kHz                               |  |  |
|  | 1:256 @ 120 kHz                              |  |  |
| DC Bus & safety signals                        | Brake, BusVoltage, BusCurre                  | entSupply, Temperature, Shunt  |  |
| Amplifier output signals                       | AmplifierEnable, Shunt, PW/                  | MHighA, PWMLowA, PWMHighB, PWMLowB,  |  |
|  | PWMHighC, PWMLowC, PV                        | NMHighD, PWMLowD   |  |
| Serial communication signals                   | SrlXmt, SrlRcv, SrlEnable                    |  |  |
| CANbus signals                                 | CANXmt, CANRcv                               |  |  |
| SPI signals                                    | SPIXmt, SPIRcv, SPIClk, SPIEnable, SPIStatus |  |  |
| Step command signals                           | Pulse, Direction, AtRest                     |  |  |
| Encoder input signals                          | QuadA, QuadB, Index                          |  |  |
| Hall sensor signals                            | Hall A-C                                     |  |  |
| Miscellaneous control signals                  | Enable, FaultOut, HostInterr                 | upt, Reset   |  |
| Drive safety functions                         | Over current detect, ove                     | r temperature detect, over voltage detect, under                             |  |
|  | voltage detect, l <sup>2</sup> t current     | t foldback   |  |
| Brake input modes                              | Passive braking, full disabl                 | e  |  |
| Output limiting                                | l <sup>2</sup> t, current, and voltage li    | mit  |  |
| Microsteps per full step                       | l to 256                                     |  |  |
| Maximum encoder rate                           | 40 Mcounts/sec                               |  |  |
| Cycle time range                               | 51.2 microseconds to 1.114 seconds           |  |  |
| Position-capture triggers                      | Index signal                                 |  |  |
| Internal RAM                                   | 6,144 16-bit words                           |  |  |
| Maximum number of simultaneous trace variables | 4  |  |  |
| NVRAM storage size                             | 1,024 16-bit words                           |  |  |
|  |  |  |  |



Notes:

- 1 Juno IC is RoHS compliant and free of Bromine and Antimony based flame retardants.
- 2 Moisture sensitive level: MSL 3



Figure 2-2: 56-Pin VQFN Physical Dimensions

2



2 Moisture sensitive level: MSL 3

## 2.4 Absolute Maximum Environmental and Electrical Ratings<sup>1</sup>

| Supply voltage (Vcc)  | -0.3V to +4.6V |
|---|----------------|
| FltCap pin voltage range  | -0.3V to 2.5V  |
| Analog voltage range with respect to AnalogGND (AnalogVcc)      | -0.3V to +4.6V |
| Input voltage (Vi)  | -0.3V to +4.6V |
| Output voltage (Vo)   | -0.3V to +4.6V |
| Input clamp current (li,clamp), peak:                           | +/-20 mA       |
| continuous:   | +/-2 mA        |
| Output clamp current (lo,clamp)                                 | +/-20 mA       |
| Package thermal impedance, 64-pin TQFP package ( $	heta_{JA}$ ) | 56.5°C/W       |
| Package thermal impedance, 56-pin VQFN package ( $	heta_{JA}$ ) | 34.8°C/W       |
| Junction temperature range (Tj) <sup>(2)</sup>                  | -40°C to 150°C |
| Storage temperature range (Ts)                                  | -65°C to 150°C |
| Nominal clock frequency (Fclkin)                                | 10.0 MHz       |

(1) Unless otherwise noted, all voltages are with respect to GND

(2) Please refer to "Design tips" section for more information

This page intentionally left blank.

# **3. Electrical Characteristics**

#### In This Chapter

- DC Characteristics for Juno ICs
- AC Characteristics

## 3.1 DC Characteristics for Juno ICs

(Vcc and Ta per operating ratings, Fclkin=10.0MHz)

| Symbol                 | Parameter                        | Minimum       | Maximum       | Conditions                    |
|------------------------|----------------------------------|---------------|---------------|-------------------------------|
| V <sub>cc</sub>        | Supply voltage                   | 2.97V         | 3.63V         | With respect to GND           |
| I <sub>dd</sub>        | Supply current                   |               | 115 mA        | All I/O pins are floating     |
| AnalogV <sub>cc</sub>  | Analog input supply voltage      | 2.97V         | 3.63V         | With respect to<br>AnalogGND  |
| AnalogI <sub>dd</sub>  | Analog supply current            |               | 18 mA         |                               |
| T <sub>a</sub>         | Operating free-air temperature   | -40°C         | 105°C         | Note 2                        |
| Т <sub>ј</sub>         | Operating junction temperature   | -40°C         | 150°C         |                               |
| Input Voltag           | ge                               |               |               |                               |
| V <sub>ih</sub>        | Logic I input voltage            | 2.0V          | Vcc+0.3V      |                               |
| V <sub>il</sub>        | Logic 0 input voltage            | -0.3V         | 0.8V          |                               |
| Output Volt            | tage                             |               |               |                               |
| V <sub>oh</sub>        | Logic I Output Voltage           | 2.4V          |               | lo=-4 mA                      |
|                        |                                  | Vcc-0.2V      |               | lo=-50 μA                     |
| V <sub>ol</sub>        | Logic 0 Output Voltage           |               | 0.4V          | lo=4 mA                       |
| Other                  |                                  |               |               |                               |
| I <sub>out</sub>       | Tri-state output leakage current | -2 μA         | 2 μΑ          | Vo=0 or Vcc                   |
| l <sub>in</sub>        | Input current                    | 2 μΑ          | -205 μA       | Vcc=3.3V with internal pullup |
| I <sub>in,~RESET</sub> | Input current for ~RESET pin     | 2 μΑ          | -375 μA       | Vcc=3.3V                      |
| C <sub>i</sub>         | Input capacitance                |               | 2 pF          | typical                       |
| V <sub>fltcap</sub>    | FltCap voltage                   |               | 1.9V          | typical                       |
| V <sub>reset</sub>     | Vcc BOR trip point               | 2.50V         | 2.96V         | Falling Vcc                   |
| V <sub>reset,hys</sub> | Vcc BOR hysteresis               |               | 35 mV         | typical                       |
| T <sub>reset</sub>     | BOR reset release delay time     | <b>400</b> μs | <b>800</b> μs | Time from removing reset      |

3

| Symbol              | Parameter  | Minimum | Maximum | Conditions                   |
|---------------------|--|---------|---------|------------------------------|
| V <sub>analog</sub> | Analog input voltage range   | 0       | 3.3V    | With respect to<br>AnalogGND |
| C <sub>ai</sub>     | Analog input capacitance   |         | 5 pF    | typical                      |
| E <sub>dnl</sub>    | Differential nonlinearity error.<br>Difference between the step width<br>and the ideal value. No missing<br>codes.   | -1      | I       | LSB                          |
| E <sub>inl</sub>    | Integral nonlinearity error.<br>Maximum deviation from the best<br>straight line through the ADC<br>transfer characteristics, excluding<br>the quantization error. | -4      | 4       | LSB                          |
| E <sub>70</sub>     | Zero-offset error  | -4      | 4       | LSB                          |

#### Notes:

(1)  $\mathrm{V}_{cc}$  and  $\mathrm{AnalogV}_{cc}$  should be within 0.3V from each other.

(2) Please refer to design tips in the Application Notes of this manual for thermal design considerations.

## 3.2 AC Characteristics

Refer to Chapter 4, Timing Diagrams, for timing diagrams.

## 3.2.1 Clock

| Timing Interval          | No. | Min     | Max      |
|--------------------------|-----|---------|----------|
| ClkIn frequency, typical |     |         | 10 MHz   |
| ClkIn period, typical    | ТΙ  |         | 100 nSec |
| ClkIn fall time          | T2  |         | 6 nSec   |
| ClkIn rise time          | Т3  |         | 6 nSec   |
| ClkIn pulse duration     |     | 0.45 TI | 0.55 TI  |

## 3.2.2 Quadrature Encoder Input

| Timing Interval          | No. | Min Max   |  |
|--------------------------|-----|-----------|--|
| Encoder pulse width      | T4  | 33.3 nSec |  |
| Dwell time per state     | T5  | 16.7 nSec |  |
| ~Index active pulse time | Т6  | 33.3 nSec |  |

#### Notes:

(1) ~Index is defaulted as active low, which is shown here. It can be configured to be active high.

(2) Rising edge of Index signal must occur 25 nSec or more before AB count state end to guaranteed capture occurs on same count. Otherwise capture may register on next count.

### 3.2.3 Host SPI

| Timing Interval                           | No. | Min      | Max     |
|---|-----|----------|---------|
| SPIClock clock cycle time                 | T23 | 100 nSec |         |
| Pulse duration, SPIClock high             | T24 | 33 nSec  | 0.5 T23 |
| Pulse duration, SPIClock low              | T25 | 33 nSec  | 0.5 T23 |
| ~SPIEnable low to first SPIClock high     | T26 | 25 nSec  |         |
| SPIClock high to SPIXmt valid delay time  | T27 |          | 21 nSec |
| SPIXmt data valid time after SPIClock low | T28 | T25      |         |
| SPIRcv setup time before SPIClock high    | T29 | 25 nSec  |         |
| SPIRcv valid time after SPIClock low      | Т30 | 25 nSec  |         |
| Last SPIClock low to ~SPIEnable high      | T31 | 25 nSec  |         |

## 3.2.4 Power-on Reset

| Timing Interval   | No. | Min | Max             |
|---|-----|-----|-----------------|
| Power on pulse duration driven by device (typical) (note 1) | Т32 |     | <b>600</b> μSec |
| Device ready/ outputs initialized (typical)                 | Т33 |     | 2 mSec          |
| ClkIn ready to ~Reset release                               | T34 | 0   | 10 mSec         |
| ClkIn high impedance before powerup                         | T36 | 0   |                 |
| ClkIn high impedance after Vcc stabilizes                   | Т37 | 0   |                 |

Note: The device will generate a ~Reset pulse upon power on. An external ~Reset signal is optional.

## 3.2.5 Warm Reset

| Timing Interval                    | No. | Min    | Max |
|------------------------------------|-----|--------|-----|
| ~Reset low duration for warm reset | Т35 | 32 T I |     |

## 3.2.6 Pulse & Direction

| Timing Interval                       | No. | Min     | Max     |  |
|---------------------------------------|-----|---------|---------|--|
| Pulse frequency                       |     |         | I.0 Mhz |  |
| Pulse width                           | Т38 | 50 nSec |         |  |
| Direction setup time before pulse low | Т39 | 26 nSec |         |  |
| Direction valid time after pulse low  | T40 | 40 nSec |         |  |

This page intentionally left blank.

# 4. Timing Diagrams

### In This Chapter

Clock

- Quadrature Encoder Input
- SPI Timing
- Power On Timing
- Warm Reset
- Pulse & Direction

For the values of Tn, please refer to the table in Section 3.2, "AC Characteristics" for more information

## 4.1 Clock



## 4.2 Quadrature Encoder Input



Figure 4-1: Clock Timing

4

Figure 4-2: Quad Encoder Timing







This page intentionally left blank.

# 5. Pinouts and Pin Descriptions

### In This Chapter

- Pinouts for the MC78113
- Pinouts for the MC71112
- Pinouts for the MC71112N
- Pinouts for the MC73112
- Pinouts for the MC73112N
- Pinouts for the MC71113
- Pinouts for the MC73113
- Pinouts for the MC74113
- Pinouts for the MC74113N
- Pinouts for the MC75113
- Pinouts for the MC75113N
- Juno IC Pin Descriptions

5



Figure 5-1: MC78113 Pinouts

B



| No Connect         |  |  |  |  |
|--------------------|--|--|--|--|
| 1, 8, 11, 20, 22,  |  |  |  |  |
| 23, 30, 40, 47, 48 |  |  |  |  |



B





#### **Pinouts for the MC73112** 5.4 15, 16 29, 57 Figure 5-4: MC73112 AnalogVcc Vcc **Pinouts** 56 -PWMHighA 55 -PWMLowA PWMHighB 54 -SrlXmt — 27 SrlRcv — 32 53 PWMLowB 51 -PWMHighC SPIClock - 33 PWMLowC 50 -SPIXmt - 34 ~Reset 7 SPIRcv - 36 AmplifierEnable 3-~SPIEnable - 44 37 – ~Brake MC73112 ~HostInterrupt - 46 2. ~Enable

Shunt

QuadA

QuadB

Index

HallA

HallB

HallC

FaultOut

AnalogGND

17, 21, 24

Vres

61

GND

6, 28, 41, 42,

58, 60

No Connect

1, 8, 11, 20, 22, 23, 25, 26, 30, 38, 39, 40, 45, 47, 48

49-

62 -

63-

4

35.

31 —

64 — 52 — CurrentA

CurrentB

CurrentC

AnalogCmd - 18

BusVoltage

Temperature

BusCurrentSupply

FltCap

5, 43, 59

- 14

- 19

- 12

- 13

- 10

- 9

MC78113 Electrical Specifications

B



## 5.6 Pinouts for the MC71113

|  | 15,   | 16   | 29, 57                                    |  |  |
|--|---|--|---|--|--|
|  |   |  |   |  |  |
|  | Analo   | gVcc   | Vcc                                       |  |  |
| 45<br>56<br>55<br>57<br>37<br>49<br>62<br>63<br>52 | ClkIn<br>PWMHighA/PWMI<br>PWMLowA/PWMS<br>PWMLowB<br>~Reset<br>AmplifierEnable<br>~Brake<br>~Enable<br>Shunt<br>QuadA<br>QuadB<br>Index<br>FaultOut | MagA<br>iignA<br>MC711   | SrlEnable<br>Puls<br>13 ~~H<br>BusCu<br>T | SrlXmt -<br>SrlRcv -<br>CANXmt -<br>CANRcv -<br>e/SPIStatus -<br>e/SPIClock -<br>SPIEnable -<br>ostInterrupt -<br>CurrentA -<br>CurrentB -<br>BusVoltage -<br>rrentSupply -<br>emperature -<br>AnalogCmd -<br>Fachometer - | $\begin{array}{c} - & 27 \\ - & 32 \\ - & 25 \\ - & 26 \\ - & 61 \\ - & 33 \\ - & 34 \\ - & 36 \\ - & 44 \\ - & 44 \\ - & 19 \\ - & 13 \\ - & 10 \\ - & 9 \\ - & 18 \\ - & 24 \end{array}$ |
|  | AnalogGND   | GND  | FltC                                      | ар   |  |
|  |   |  |   |  |  |
|  | 12, 17, 21  | 6, 28, 41, 4<br>58, 60   | 2, 5, 43                                  | , 59   |  |
|  |   | No Connec<br>1, 8, 11, 20,<br>23, 30, 31, 35, 3<br>40, 47, 48, 50, 3 | 22,<br>38, 39,<br>51, 64                  |  |  |

Figure 5-6: MC71113 Pinouts

5

B



## 5.8 Pinouts for the MC74113



Figure 5-8: MC74113 Pinouts B


## 5.10 Pinouts for the MC75113



#### Figure 5-10: MC75113 Pinouts

MC78113 Electrical Specifications



## 5.12 Juno IC Pin Descriptions

The following table details the pinouts for the Juno ICs.

|                      | 64-Pin<br>TQFP | 56-Pin<br>VQFN |           |   |
|----------------------|----------------|----------------|-----------|---|
| Name                 | Pin #          | Pin #          | Direction | Description   |
| ~Reset               | 7              | 5              | in/out    | This pin is the master reset input. It may be temporarily<br>brought low to reset Juno to its initial conditions and then<br>restored to high for normal operation. During a power-on or<br>reset condition this pin is driven low by Juno. If this pin is<br>driven, it must be with an open drain output device.<br>For correct reset operation a 10k pull-up resistor should be<br>added between Reset and Vcc. In addition, a 100nF or smaller<br>capacitor is recommended between Reset and GND.<br>During powerup it is not necessary to provide a reset. Juno<br>generates an internal reset upon powerup. |
| ClkIn                | 45             | -              | in        | This pin is the master clock input. It is driven at a nominal 10 MHz using an external clock. For the MC71112, MC73112, MC74113 and MC75113 this pin is left unconnected, and an internal oscillator is used to generate the clock.   |
| PWMHighA/<br>PWMMagA | 56             | 49             | out       | Depending upon the selected motor type and output mode,<br>these pins have the following functions:<br>PW/MHighA/B/C/D signals encode the high side drive for a   |
| PWMLowA/<br>PWMSignA | 55             | 48             |           | switching bridge with separate high/low controls. The default<br>encoding is active high, however this can be changed using the   |
| PWMHighB             | 54             | 47             |           | SetDrivePWM command.  |
| PWMLowB              | 53             | 46             |           | PWMLowA/B/C/D signals encode the low side drive for a   |
| PWMHighC/<br>PWMMagC | 51             | 45             |           | switching bridge with separate high/low controls. The default<br>encoding is active high, however this can be changed using the<br>SetDrivePWM command.   |
| PWMLowC/<br>PWMSignC | 50             | 44             |           | <i>PWMMagA/C</i> signals encode the magnitude of a pulse width modulated output for use with switching bridges with sign/   |
| PWMHighD             | 39             | 34             |           | magnitude controls. The default encoding is active high,  |
| PWMLowD              | 38             | 33             |           | nowever this can be changed using the SetDrivePVVM<br>command.<br>PWMSignA/C encode the sign of the pulse width modulated<br>output for use with switching bridges with sign/magnitude<br>controls. The default encoding is active high, however this can<br>be changed using the SetDrivePWM command.  |
| AmplifierEnable      | 3              | 22             | out       | This pin provides an amplifier enable signal that may be useful<br>for some amplifier connection schemes. A high signal indicates<br>that amplifier output should be enabled and a low indicates<br>that amplifier output should be disabled.   |
| ~Brake               | 37             | 32             | in        | This pin inputs a high speed PWM output disable that may be<br>useful for a braking function with some PWM amplifier<br>schemes. When low, PWM output is overridden to execute a<br>brake function or if so programmed, to be disabled. PWM<br>operation is normal when this signal is high.  |
| ~Enable              | 2              | I              | in        | This pin is an enable input. To allow normal operations a low<br>signal is asserted. When a high signal is asserted a<br>programmable response may disable motor control<br>operations, although communications and various other<br>operations are still available.  |

|                     | 64-Pin<br>TQFP | 56-Pin<br>VQFN |           |  |
|---------------------|----------------|----------------|-----------|--|
| Name                | Pin #          | Pin #          | Direction | Description  |
| Shunt               | 49             | 33             | out       | This pin provides a PWM-based shunt signal that may be used<br>with an external switching circuit and high wattage resistor or<br>other energy dissipating device to regulate supply bus<br>overvoltage conditions. The default encoding is active high<br>however this can be changed with the SetDrivePWM<br>command.  |
| QuadA               | 62             | 55             | in        | These pins input the A and B quadrature signals along with the   |
| QuadB               | 63             | 56             |           | Index signal for an incremental encoder. By default a valid  |
| Index               | 4              | 2              |           | index pulse is recognized when "Index transitions low,<br>however the interpretation of this signal can be changed via<br>the command SetSignalSense.<br>Note: Index capture is not conditioned by the QuadA and<br>QuadB signals. If such conditioning is not provided by the   |
|                     |                |                |           | encoder then external circuitry should be used if such conditioning is desired   |
|                     |                |                |           | If unused, these pins may be left unconnected.   |
| HallA/AtRest        | 35             | 23             | in        | These pins input Hall-encoded phasing inputs for brushless<br>DC motors. The A, B, and C signals encode six valid states as  |
| HallB               | 31             | 42             |           | follows: A on, A and B on, B on, B and C on, C on, C and A   |
| HallC               | 64             | 34             |           | on. By default a sensor is defined as being on when its signal is<br>high, however this signal interpretation can be changed via the<br>command SetSignalSense.<br>Note: Some Hall sensors require a pull up resistor to 3.3V on   |
|                     |                |                |           | each signal to establish a proper high signal. Check your Hall   |
|                     |                |                |           | AtRest, which is used for stepper motor control only,  |
|                     |                |                |           | switched to low power or standby. By default a high level on   |
|                     |                |                |           | this signal indicates the axis is at rest and a low signal indicates   |
|                     |                |                |           | the axis is in motion however this signal interpretation can be  |
|                     |                |                |           | If unused, these pins may be left unconnected.   |
| FaultOut            | 52             | 40             | out       | This pin provides a general purpose fault indicator that can be<br>programmed to indicate a number of conditions including a<br>motion error, drive exception, or various other conditions. A  |
|                     |                |                |           | high indicates that a fault condition is present.  |
| SrlXmt              | 27             | 24             | out       | This pin outputs serial data from the asynchronous serial port.  |
| SrIRcv              | 32             | 28             | in        | This pin inputs serial data to the asynchronous serial port.<br>If unused, this pin may be left unconnected.   |
| CANXmt              | 25             | -              | out       | This pin transmits serial data to the CAN transceiver.   |
| CANRcv              | 26             | -              | in        | This pin inputs serial data from the CAN transceiver. If unused, this pin may be left unconnected.   |
| SrlEnable/SPIStatus | 61             | -              | out       | When the serial port is configured for multi-drop operation,<br>this pin sets the serial port enable line. SrlEnable is high during<br>transmission and low otherwise.<br>When the serial port is configured for point-to-point<br>operation, this pin is low when there is an SPI command<br>result waiting to be read by the host and high otherwise. In<br>point-to-point mode, if the SPI command interface is not used<br>than this pin will always be high |
|                     |                |                |           | Whether this pin function is used or not this pin must<br>be connected to a 10 Kohm pullup resistor.   |

|                            | 64-Pin<br>TQFP | 56-Pin<br>VQFN |           |  |
|----------------------------|----------------|----------------|-----------|--|
| Name                       | Pin #          | Pin #          | Direction | Description  |
| Pulse/SPIClock             | 33             | 29             | in        | Pulse provides a pulse (step) signal for the pulse & direction<br>command input function. A step occurs when this signal<br>transitions from a high state to a low state. This default<br>behavior can be changed using the command SetSignalSense.<br><i>SPIClock</i> inputs the clock signal used with synchronous serial<br>transfer on the host communication SPI bus.<br>If unused, this pin may be left unconnected.                                       |
| SPIXmt                     | 34             | 30             | out       | This pin transmits synchronous serial data on the host communication SPI bus to the host processor.  |
| Direction/SPIRcv           | 36             | 31             | in        | Direction indicates the direction of motion for the pulse &<br>direction command input function. By default a high level on<br>this signal indicates a positive direction move and a low level<br>indicates a negative direction move, however this signal<br>interpretation can be changed via the command<br>SetSignalSense.<br>This pin inputs synchronous serial data for the host<br>communication SPI bus.<br>If unused, this pin may be left unconnected. |
| ~SPIEnable                 | 44             | 39             | in        | This pin inputs an enable signal for the host communication<br>SPI bus. This signal is active low, meaning it should be low<br>when an SPI host communication is occurring, and high at all<br>other times.<br>If used, this pin must be controlled in series with a<br>470 ohm resistor.  |
|                            |                |                |           | This pip provides a best interrupt signal W/ben low it signal  |
| <sup>-</sup> HostInterrupt | 46             | 43             | out       | <ul> <li>an interrupt to the host processor.</li> <li>Whether this pin function is used or not this pin must be connected to a 10 Kohm pullup resistor.</li> </ul>   |
| CurrentA                   | 14             | 12             | in        | These pins input analog voltages representing leg current flow   |
| CurrentB                   | 19             | 16             |           | through the low sides of the switching bridges. DC Brush   |
| CurrentC                   | 12             | 10             |           | motors use the A and B inputs, Brushless DC motors use the   |
| CurrentD                   | 21             | 18             |           | C, and D inputs. These signals are only accessible when the<br>PWM output mode is set to PWM High/Low.<br>These signals are used when a current loop is used or when<br>I2t current monitoring is desired. These signals are sampled<br>by an internal A/D converter. The A/D resolution is I2 bits.<br>The allowed signal input range is zero to 3.3V. If unused, these<br>signals should be connected to AnalogGND.  |
| BusVoltage                 | 13             | 11             | in        | This pin inputs an analog voltage representing the DC bus<br>voltage.<br>The allowed signal input range is zero to 3.3V.<br>If unused, this signal should be connected to AnalogGND.   |
| BusCurrentSupply           | 10             | 8              | in        | This pin inputs an analog voltage representing the current<br>through the supply terminal of the DC bus.<br>The allowed signal input range is zero to 3.3V.<br>If unused, this signal should be connected to AnalogGND.  |
| Temperature                | 9              | 7              | in        | This pin inputs an analog voltage representing the<br>temperature of the amplifier or other monitored circuitry.<br>The allowed signal input range is zero to 3.3V.<br>If unused, this signal should be connected to AnalogGND.  |
| AnalogVcc                  | 16<br>15       | 3<br> 4        | N/A       | These pins are connected to the analog input supply voltage,<br>which must be in the range of 3.0V to 3.6V.<br>If analog inputs are not used, these pins should be tied to Vcc.  |

|             | 64-Pin<br>TQFP  | 56-Pin<br>VQFN                             |           |   |
|-------------|---|--|-----------|---|
| Name        | Pin #   | Pin #                                      | Direction | Description   |
| AnalogCmd   | 18  | 18   | in        | This pin is used for commanding either voltage, torque, or velocity using an analog signal.<br>If unused, this pin should be tied to AnalogGND.   |
| Tachometer  | 24  | -  | in        | This pin is used for feedback from a tachometer or other<br>analog device used to measure the effect of the output<br>voltage, torque, or velocity.<br>If unused, this pin should be tied to AnalogGND              |
| AnalogGND   | 17  | 15<br>21                                   | N/A       | This pin should be connected to the analog input power<br>supply return.<br>Any unused analog inputs (CurrentA-D, BusVoltage, Bus-<br>CurrentSupply, Temperature or AnalogCmd pins) should be<br>tied to AnalogGND. |
| Vcc         | 29<br>57  | 26<br>50                                   | N/A       | All of these pins must be connected to the Juno digital supply voltage, which should be in the range of 3.0V to 3.6V.   |
| FltCap      | 5<br>43<br>59   | 3<br>38<br>52                              | N/A       | Each of these pins must be connected to a 1.2 $\mu\text{F}$ (or higher) filtering capacitor which in turn connects to GND.  |
| Vres        | 61*   | 41<br>54                                   |           | Each of these pins must be connected to Vcc via a 10K resistor.<br>*Note that for the MC71113, MC73113, and MC78113 ICs pin #61 is used for the SrlEnable/SPI Status function.                                      |
| GND         | 6<br>28<br>41<br>42<br>58<br>60                       | 4<br>25<br>36<br>37<br>51<br>53            | N/A       | All of these pins must be connected to the digital power supply return.   |
| No Connect  | <br>8<br>  <br>20<br>22<br>23<br>30<br>40<br>47<br>48 | 6<br>9<br>17<br>19<br>20<br>27<br>35<br>42 | N/A       | These pins must be left unconnected.  |
| Thermal pad | N/A   | T. Pad                                     | N/A       | Thermal pad on bottom of 56-pin VQFN IC package must be connected to GND. For 64-pin TQFP package there is no thermal pad.  |

# 6. Juno IC Configuration in the Production Application

6

### In This Chapter

Loading the NVRAM

Analog Signal Calibration in the Production Application

Each Juno IC, before undertaking motor control, must be programmed with control parameter settings appropriate for the application that it will be used in. These control parameters include quantities such as PWM (Pulse Width Modulation) frequency, current gains, safety thresholds, and more.

Correct values for these parameters are most easily determined by PMD's Pro-Motion software, specifically via the Axis Wizard setup sequence. The axis wizard steps the user through a series of set up and verification pages, finally resulting in a set of control parameter values tailored for that application.

Once the control parameters are determined the user has two choices for how they can be loaded into the active control registers of the Juno IC when it is in the production PCB; they can be stored permanently into the Juno IC's internal NVRAM (non-volatile memory) and auto-loaded at power-up, or they can be loaded at each power-up by an on-board microprocessor connected to the Juno IC via its host communication port.

Loading the NVRAM data into the Juno IC is discussed in the next section, <u>Section 6.1</u>, "Loading the NVRAM." Applications that load the control registers via an on-board microprocessor use specially formatted host commands sent over one of the Juno IC's host communication ports. For more information refer to the *Juno Velocity & Torque Control IC User Guide.* 

## 6.1 Loading the NVRAM

There are several options for loading the Juno IC's NVRAM as detailed in the following sections.

### 6.1.1 NVRAM Programming via Juno DK IC Socket

The socketed version of the DK78113 Juno Developer Kit (P/N DK78113S) can be used to program the NVRAM on 64-pin TQFP Juno ICs prior to soldering into the user's production PCB. Pro-Motion as well as a more compact programming executive available from PMD supports script files to program the Juno IC NVRAM. For more information on PMD script files refer to

the Juno Velocity & Torque Control IC User Guide.

The 56-pin VQFN Juno IC DK does not have a socket and therefore cannot be used to program the NVRAM of production 56-pin VQFN Juno ICs.



### 6.1.2 NVRAM Programming Via 3-pin UART Cable

An alternate NVRAM download approach is after it is installed in the production PCB. This approach requires that each installed Juno IC have a 3-pin connector installed on the production board. A technician plugs into this connector and

performs the NVRAM download. To be programmed the Juno IC must receive power, so this generally means the PCB power is turned on during this procedure.

To facilitate this approach PMD provides a dedicated USB to 3-pin UART programming cable (PMD Part # Cable-USB-3P) with each Juno DK. This programming cable plugs into the PC's USB port on one end and into a 1x3 3-pin 2 mm header component on the other. A representative PCB mounted header component is Samtec MTMM-103-04-x-S-150.

#### Figure 6-1: NVRAM Programming Via 3-pin UART Programming Cable

6



The table below shows the required wiring for the on-board connector if it is to be used with the PMD programming cable:

| Connector<br>Pin # | Pin Name | Juno Pin #<br>(64-pin TQFP<br>Package) | Juno Pin #<br>(56-pin VQFN<br>Package) |
|--------------------|----------|--|--|
| Ι                  | SrlXmt   | 27                                     | 24                                     |
| 2                  | SrlRcv   | 32                                     | 28                                     |
| 3                  | GND      | 28 (or other ground signal)            | 25                                     |

### 6.1.3 Purchasing Pre-Configured Parts

Some PMD distributors and sales outlets provide an NVRAM programming service for Juno ICs. Contact your PMD sales representative for availability, terms, and conditions.

## 6.2 Analog Signal Calibration in the Production Application

After integration into a PCB, it is recommended that the external analog signal processing circuitry that inputs to the Juno IC be calibrated. While some applications will not need these calibrations, for applications where the quietest, smoothest, and most accurate motion is desired, calibration of the analog inputs is recommended. Depending on the Juno IC being used the signals that can be calibrated are *AnalogCmd*, *Tachometer*, and *CurrentA-CurrentD*. For more information refer to the *Juno Velocity & Torque Control IC User Guide*.

When a microprocessor is on the user PCB, generally this microprocessor is used to send the serial host commands needed to calibrate the analog inputs as part of the power up sequence.

Another approach is to have the Juno IC execute the calibration procedure during its NVRAM-based initialization startup. This is done by embedding an initialization sequence that executes the calibration during the NVRAM startup at each power cycle. This approach can only be used when the startup condition of the PCB and connected motors is controllable. For example if the calibration occurs when the motors are still spinning, the calibration will not give accurate results.

A third approach that has the benefit of eliminating the need for calibration at each power cycle is to execute the calibration on the assembled PCB using a 3-pin UART programming cable. The derived calibration offsets are stored into NVRAM and recalled automatically thereafter by Juno at each power-up. PMD provides easy-to-use standalone Windows compatible executables for this function. For more information see <u>Section 6.1.2</u>, "<u>NVRAM Programming Via 3-pin UART Cable.</u>"

PMD's Pro-Motion software program provides a convenient set up facility for selecting NVRAM startup options. In addition, advanced users can directly edit Juno start up scripts using a text editor. Refer to the *Juno Velocity & Torque Control IC User Guide* for more information.



This page intentionally left blank.

# 7. Electrical Operational Information

### In This Chapter

- Juno ICs Connection Overview
- Internal Block Diagram
- Switching Amplifier Control
- Current Control
- Drive & DC Bus Safety
- Host Communications
- Input Signal Processing
- Reset
- ► Juno RAM and NVRAM
- Output Signal Status During Powerup
- Analog Signal Input

## 7.1 Juno ICs Connection Overview

Figure 7-1 shows an overview of the connection scheme for Juno ICs.

For a general description of the Juno ICs see the Juno Velocity & Torque Control IC User Guide. For detailed information on commands supported by the Juno ICs see the Juno Velocity & Torque Control IC Programming Reference.



## 7.2 Internal Block Diagram



Figure 7-2: Juno ICs Internal Block Diagram

Figure 7-2 shows an internal block diagram for the Juno ICs. The functionality is divided into several major functional blocks, listed below:

- Switching amplifier control
- Current control
- Drive & DC Bus safety
- Host communications
- Input signal processing
- NVRAM & trace RAM

The subsequent sections of this chapter will provide detailed information on the electrical functions associated with these major functional blocks. For a complete theory of operations on the Juno ICs refer to to the *Juno Velocity & Torque Control IC User Guide*.

## 7.3 Switching Amplifier Control

Juno family ICs provide two different switch control methods. These switch control methods are known as PWM High/Low, and Sign/Magnitude PWM.

The primary switching control mode that is used when Juno's current control facility is utilized is PWM High/Low mode. Sign/Magnitude PWM is typically used with single-IC amplifiers or with bridges that directly input those control interfaces.

The following sections provide detailed operation, connection, and configuration information for each of these two amplifier control modes.

### 7.3.1 PWM High/Low Motor Output Mode

The Juno ICs can control high-efficiency MOSFET or IGBT power stages with individual high/low switch input control. A different configuration is used for each motor type:

- DC Brush motors are driven in an H-Bridge configuration consisting of 4 switches.
- Brushless DC motors are driven in a triple half-bridge configuration consisting of 6 switches.
- Step motors are driven in a two H-Bridge configuration consisting of 8 switches.

In PWM High/Low mode each signal carries a variable duty cycle PWM signal. A zero desired motor command results in the high side and low side being active for the same amount of time. Positive motor commands are encoded as a high-side duty cycle greater than 50%, and negative motor commands are encoded as a duty cycle less than 50%. This is shown in Figure 7-3.



#### 7.3.1.1 PWM High/Low Signal Generation

In PWM High/Low mode two output pins are used per motor or per motor phase, allowing separate high-side/lowside control of each bridge switch. In this scheme, as Figure 7-4 shows, the high side output and the low side output are never active at the same time, and there is generally a period of time when neither output is active. This period of time is called the dead time, and provides a shoot through protection function for MOSFET or IGBT switches.



MC78113 Electrical Specifications

Figure 7-3: PWM High/Low Encoding



The dead time is specified in nSecs and can be programmed via the command **SetDrivePWM**. The correct value can generally be determined from the MOSFET or IGBT IC manufacturer's data sheet, or you can call PMD technical support if you have questions.

In addition to dead time, some high side switch drive circuitry requires a minimum amount of off time to allow the charge pump circuitry to refresh. This parameter, set using the **SetDrivePWM** command, specifies this refresh time and has units of nSecs. The related parameter of refresh time period, which is the time interval between these off time refreshes, and which is also set using the **SetDrivePWM** command, has units of current loop cycles.

It is also possible to control the maximum allowed PWM duty cycle. This may be useful to limit the effective voltage presented to the motor windings, or to provide some other needed off-time for the switching amplifier circuitry. This PWM Limit parameter is set using the **SetDrivePWM** command.

The Juno default values for dead time, refresh time, and refresh period are set to be maximally safe but are not appropriate to drive typical switching hardware. For proper amplifier function these values must be set with values appropriate for the connected switching circuitry.



#### 7.3.1.2 PWM High/Low Brushless DC Motor Drive

<u>Figure 7-5</u> shows the typical amplifier stage arrangement when a MC73112, MC73112N, MC73113 IC or MC78113 IC with Brushless DC motor type selected is used in PWM High/Low mode.



Figure 7-5: Brushless DC Motor Bridge Configuration

#### **Electrical Operational Information**

As shown in the table below six PWM output signals and, if used, three analog feedback signals for current control interface between the MC78113 IC and the switching amplifier circuitry. Note that because the 56-pin VQFN Juno ICs only support step motors, these signals are not applicable.

|          | 64-Pin<br>TQFP | 56-Pin<br>VQFN |  |
|----------|----------------|----------------|--|
| Signal   | Pin #          | Pin #          | Description  |
| PWMHighA | 56             | 49             | Digital high side drive output for motor phase A   |
| PWMLowA  | 55             | 48             | Digital low side drive output for motor phase A  |
| PWMHighB | 54             | 47             | Digital high side drive output for motor phase B   |
| PWMLowB  | 53             | 46             | Digital low side drive output for motor phase B  |
| PWMHighC | 51             | 45             | Digital high side drive output for motor phase C   |
| PWMLowC  | 50             | 44             | Digital low side drive output for motor phase C  |
| CurrentA | 14             | 12             | Analog input containing the current flow through the low side of the switching bridge for phase A. |
| CurrentB | 19             | 16             | Analog input containing the current flow through the low side of the switching bridge for phase B. |
| CurrentC | 12             | 10             | Analog input containing the current flow through the low side of the switching bridge for phase C. |

#### 7.3.1.3 PWM High/Low DC Brush Motor Drive

<u>Figure 7-6</u> shows the typical amplifier stage arrangement when a MC71112, MC71112N, MC71113 IC, or MC78113 IC with DC Brush motor type selected is used in PWM High/Low mode.



As shown in the table four PWM output signals and, if used, two analog feedback signals for current control interface between the Juno IC and the switching amplifier circuitry.

| Signal   | 64-Pin<br>TQFP<br>Pin # | 56-Pin<br>VQFN<br>Pin # | Description   |
|----------|-------------------------|-------------------------|---|
| PWMHighA | 56                      | 49                      | Digital high side drive output for the positive coil terminal |
| PWMLowA  | 55                      | 48                      | Digital low side drive output for the positive coil terminal  |
| PWMHighB | 54                      | 47                      | Digital high side drive output for the negative coil terminal |
| PWMLowB  | 53                      | 46                      | Digital low side drive output for the negative coil terminal  |

Figure 7-6: DC Brush Motor Bridge Configuration

#### MC78113 Electrical Specifications

| Signal   | 64-Pin<br>TQFP<br>Pin # | 56-Pin<br>VQFN<br>Pin # | Description   |
|----------|-------------------------|-------------------------|---|
| CurrentA | 14                      | 12                      | Analog input containing the current flow through the positive leg of the bridge |
| CurrentB | 19                      | 16                      | Analog input containing the current flow through the negative leg of the bridge |

#### 7.3.1.4 PWM High/Low Step Motor Drive

<u>Figure 7-7</u> shows the typical amplifier stage arrangement when a MC74113 IC, MC74113N IC, MC75113 IC, MC75113N IC, or MC78113 IC with step motor type selected is used in PWM High/Low mode.



Figure 7-7: Two-phase Step Motor Bridge Configuration

As shown in the table below eight PWM output signals and, if used, four analog feedback signals for current control interface between the Juno IC and the switching amplifier circuitry. Because the Juno step motor ICs, unlike the DC Brush and Brushless DC ICs, are available both in the 64-pin TQFP and 56-pin VQFN package, both sets of pin #s are listed:

| Signal   | 64-Pin<br>TQFP<br>Pin # | 56-Pin<br>VQFN<br>Pin # | Description  |
|----------|-------------------------|-------------------------|--|
| PWMHighA | 56                      | 49                      | Digital high side drive output for motor phase A, positive coil terminal |

|          | 64-Pin<br>TQFP | 56-Pin<br>VQFN |   |
|----------|----------------|----------------|---|
| Signal   | Pin #          | Pin #          | Description   |
| PWMLowA  | 55             | 48             | Digital low side drive output for motor phase A, positive coil terminal                 |
| PWMHighB | 54             | 47             | Digital high side drive output for motor phase A, negative coil termi-<br>nal           |
| PWMLowB  | 53             | 46             | Digital low side drive output for motor phase A, negative coil terminal                 |
| PWMHighC | 51             | 45             | Digital high side drive output for motor phase B, positive coil terminal                |
| PWMLowC  | 50             | 44             | Digital low side drive output for motor phase B, positive coil terminal                 |
| PWMHighD | 39             | 34             | Digital high side drive output for motor phase B, negative coil termi-<br>nal           |
| PWMLowD  | 38             | 33             | Digital low side drive output for motor phase B, negative coil terminal                 |
| CurrentA | 14             | 12             | Analog input containing the current flow through the positive leg of the phase A bridge |
| CurrentB | 19             | 16             | Analog input containing the current flow through the negative leg of the phase A bridge |
| CurrentC | 12             | 10             | Analog input containing the current flow through the positive leg of the phase B bridge |
| CurrentD | 21             | 18             | Analog input containing the current flow through the negative leg of the phase B bridge |

#### 7.3.1.5 Using PWM High/Low Mode With Single Input Bridges

An alternate scheme for use of the PWM High/Low output mode is to utilize only the high control signals, leaving the low signals unconnected. This scheme is used to interface with amplifiers that do not provide separate high/low input but rather a single input control signal per high/low switch pair. Note that in this scheme, the *AmplifierEnable* signal, rather than being optional, must be connected to the bridge to control when the bridge should be active. For more information on the *AmplifierEnable* signal, see Section 7.3.3, "AmplifierEnable".

Since there is no separate high and low side signal to control the switches, the bridge itself, rather than the Juno IC, must handle some details of switch timing generation such as shoot through protection. Along those lines the dead time variable (see Section 7.3.1.7, "PWM High/Low Control Parameters" for details on amplifier-related Juno settings) should be set to zero when the Juno is connected in this configuration.

#### 7.3.1.6 Low Pass PWM Signal Filtering

Some integrated amplifier ICs expect an analog command input. Using Juno this can be accomplished by low pass filtering the PWM output signal thereby generating an analog signal. Depending on the input voltage required, additional analog processing circuitry may be needed. Note also that depending on the amplifier command format expected, low pass filtering of the Sign/Magnitude PWM signal may be preferred versus the PWM high/low format signal.

As was the case for interconnection to single-input bridges, when analog input integrated bridges are used, current control, if desired, must be provided by the external bridge circuitry.

#### 7.3.1.7 PWM High/Low Control Parameters

There are a number of Juno parameters which are used to set up or control the switching amplifier circuitry shown in Figures 7-5-7-7 when the motor output mode is set to PWM High/Low. All of the parameters listed below are set using the SetDrivePWM command.

| Parameter               | Range & Units                         | Description  |
|-------------------------|---------------------------------------|--|
| PWM Switching Frequency | 20 KHz<br>40 KHz<br>80 KHz<br>120 kHz | Higher inductance motors should be set for 20 kHz. Lower<br>inductance motors may use 40, 80, or 120 kHz to maximize<br>current control accuracy and minimize heat generation. The<br>default value for this parameter is 20 kHz.      |
| PWM Dead Time           | 0-16,383 nSec                         | The correct setting of this parameter depends on the spe-<br>cific switching circuitry used. See the manufacturer's data<br>sheet for more information. The default value for this<br>parameter is 12,787 nSec.                        |
| PWM Refresh Time        | 0-32,767 nSec                         | Some high-side switch drive circuitry requires a minimum<br>amount of off time, applied at a programmable period inter-<br>val, to allow the charge pump circuitry to refresh. The<br>default value for this parameter is 32,767 nSec. |
| PWM Refresh Period      | I-32,767 cycles                       | Some high-side switch drive circuitry requires a minimum<br>amount of off time, applied at a programmable period inter-<br>val, to allow the charge pump circuitry to refresh. The<br>default value for this parameter is 1 cycle.     |
| PWM Limit               | 0-16,384 % output/163.84              | This parameter allows the maximum PWM duty cycle to be<br>set. The default value for this parameter is 16,384 which<br>corresponds to 100% output.   |
| PWM Signal Sense        | l 6-bit mask                          | This parameter allows the signal sense of the PWM output<br>signals to be specified. A I in the bit mask indicates active<br>high, a 0 indicates active low. The default value is all signals<br>active high.                          |

The following table shows these amplifier-related control parameters:

### 7.3.2 Sign/Magnitude PWM Output Mode



Figure 7-8: Sign/ Magnitude PWM Encoding

In Sign/Magnitude PWM mode, two pins are used to output the motor command information for each motor phase. One pin carries the PWM magnitude, which ranges from 0 to 100% as shown in <u>Figure 7-8</u>. A high signal on this pin means the motor coil should be driven with voltage. A second pin outputs the sign of the motor command by going high for positive sign, and low for negative.

In Sign/Magnitude PWM control mode only DC Brush and step motors can be controlled. Brushless DC motors can not be controlled in this mode.



#### 7.3.2.1 Sign/Magnitude PWM DC Brush Motor Drive

Figure 7-9: Sign/ Magnitude PWM DC Brush Motor Connections

7



Figure 7-9 shows a typical connection for DC Brush motors or solenoid type actuators when Sign/Magnitude PWM motor output mode is used. Note that in this mode the Juno does not provide current control, and therefore if current control is desired this capability must be provided by the amplifier bridge circuitry.

As shown in the table below a PWM magnitude and PMW sign signal are used to interface between the Juno IC and the amplifier circuitry.

|                | 64-Pin<br>TQFP | 56-Pin<br>VQFN |   |
|----------------|----------------|----------------|---|
| MC78113 Signal | Pin #          | Pin #          | Description   |
| PWMMagA        | 56             | 49             | Digital PWM magnitude output for the H-bridge switching amplifier   |
| PWMSignA       | 55             | 48             | Digital sign side drive output for the H-bridge switching amplifier |



#### 7.3.2.2 Sign/Magnitude PWM Step Motor Drive



Figure 7-10: Sign/ Magnitude PWM Step Motor Connections

Figure 7-10 shows a typical connection for a two-phase step motor when Sign/Magnitude PWM motor output mode is used. Note that in this mode the Juno IC does not provide current control, and therefore if current control is desired this capability must be provided by the amplifier bridges circuitry itself.

As shown in the table below two PWM magnitude and two PWM sign signals are output to interface between the Juno IC and the amplifier circuitry.

| Signal   | 64-Pin<br>TQFP<br>Pin # | 56-Pin<br>VQFN<br>Pin # | Description  |
|----------|-------------------------|-------------------------|--|
| PWMMagA  | 56                      | 49                      | Digital PWM magnitude output for the step motor's phase A H-bridge switching amplifier |
| PWMSignA | 55                      | 48                      | Digital sign output for the step motor's phase A H-bridge switching amplifier          |
| PWMMagC  | 51                      | 45                      | Digital PWM magnitude output for the step motor's phase B H-bridge switching amplifier |
| PWMSignC | 50                      | 44                      | Digital sign output for the step motor's phase B H-bridge switching amplifier          |

#### 7.3.2.3 Sign/Magnitude PWM Control Parameters

There are two parameters which are used to control the switching amplifier shown in <u>Figures 7-9 - 7-10</u> when the motor output mode is set to Sign/Magnitude PWM.

| Parameter               | Range & Units                         | Description   |
|-------------------------|---------------------------------------|---|
| PWM Switching Frequency | 20 KHz<br>40 KHz<br>80 KHz<br>120 kHz | Higher inductance motors should be set for 20 kHz. Lower<br>inductance motors may use 40, 80, or 120 kHz to maximize<br>current control accuracy and minimize heat generation.<br>This parameter is set using the SetDrivePWM command.<br>The default value for this parameter is 20 kHz. |
| PWM Limit               | 0-16,384 % output/163.84              | This parameter allows the maximum PWM duty cycle to be set. The default value for this parameter is 16,384 which corresponds to 100% output.  |
| PWM Signal Sense        | 16-bit mask                           | This parameter allows the signal sense of the PWM output<br>signals to be specified. A I in the bit mask indicates active<br>high, a 0 indicates active low. The default value is all signals<br>active high.   |

The following table shows these amplifier-related control parameters.

### 7.3.3 AmplifierEnable

Regardless of whether the motor output mode is set to PWM High/Low or Sign/Magnitude PWM, Juno provides an *AmplifierEnable* signal output that indicates whether the external amplifier circuitry is active or not. While not all external amplifiers will require or provide such an input control, this signal is useful for general safety purposes, as well as to simplify the task of ensuring startup without jogging the motor after powerup.

The output of this signal corresponds directly to the state of the motor output bit and the braking bit of the active operating mode register. If either of these bits are on, the *AmplifierEnable* signal is active. If both bits are off, this signal is inactive. For more information on Juno operating modes see the *Juno Velocity & Torque Control IC User Guide*.

### 7.3.4 Brake

Juno's *Brake* signal input provides a high speed PWM output disable that may be useful for safety protection when the motor output mode is set to PWM High/Low. When this input is active PWM output is driven to one of two user programmable states; a fully disabled state or a braking state. PWM operation is normal when this signal is inactive.

In the fully disabled state all switches for the selected motor type are open, meaning that all high and low control signals are driven inactive and the *AmplifierEnable* signal is inactive. In the braking state, for the selected motor type all of the high-side switch control signals are driven inactive, all of the low-side switch signals are active, and the *AmplifierEnable* signal is active, thereby closing the lower side switches.

If a brake or disable function occurs, to re-enable normal output the **ResetEventStatus** and **RestoreOperatingMode** commands are used. For more information on Juno event processing see the *Juno Velocity & Torque Control IC User Guide*.



If the braking feature is programmed it is up to the user to ensure that current flow resulting from back-EMF generation during braking does not damage the motor.



The braking function is only available with the PWM control mode set to PWM High/Low. When the output mode is Sign/Magnitude PWM the *Brake* signal can only control a disable function.

The default setting of the Brake signal input is braking. To program this function the SetEventAction command is used.

## 7.4 Current Control

Juno provides the capability for sophisticated current control in connection with the PWM High/Low motor output mode. Signals representing the instantaneously measured current of each coil leg are input in a voltage range of 0.0 to 3.3V with a voltage of 0.0 representing the largest possible negative measured current, a voltage of 1.65V representing a measured current of 0, and a voltage of 3.3V representing the largest possible positive measured current.

The following table shows the signals that are used to input the measured leg currents:

| Pin Name | 64-Pin<br>TQFP<br>Pin# | 56-Pin<br>VQFN<br>Pin# | Description                              |
|----------|------------------------|------------------------|--|
| CurrentA | 14                     | 12                     | Measured Current for Leg current input A |
| CurrentB | 19                     | 16                     | Measured Current for Leg current input B |
| CurrentC | 12                     | 10                     | Measured Current for Leg current input C |
| CurrentD | 21                     | 18                     | Measured Current for Leg current input D |

Current sensors consist of sense resistors, as shown in Figure 7-1, or linear Hall sensors. If sense resistors are used ground-referenced operational amplifiers may be used.

Current inputs are sampled at a rate of 20 kHz and should be filtered to minimize noise. A low pass filter with a rolloff of 200 kHz - 1,000 kHz is recommended, with 500 kHz being a typical value for most applications. MC78113s operating at 20 kHz PWM frequency in high noise environments may consider a rolloff on the lower end of the frequency range. Junos with PWM frequencies of 40 kHz, 80 kHz, or 120 kHz operating in low or normal noise environments may consider a rolloff on the higher end of this range.

### 7.4.1 Typical Current Signal Processing Circuitry



Figure 7-11: Typical Current Signal Processing Circuitry Figure 7-11 shows a typical leg sensing processing circuit for Juno current signal inputs. Q1 and Q2 are the half-bridges for one motor phase, and R6 is the current sensing resistor. U1A with R1~R4 is a differential amplifier for signal conditioning; it is capable of measuring bidirectional current and has an output of 1.65V at zero current. R5 and C1 form a low pass filter, and they should be placed close to the pins on the Juno IC. R1~R4 should be 1% or higher grade. The power rating of R6 should match the winding current with 50% power margin recommended.

See <u>Section 8.12, "PWM High/Low Motor Drive With Leg Current Sensing/Control"</u> for complete example schematics for various MC78113-based amplifier designs with current control.



Juno's current control feature only functions when the PWM output mode is set to PWM High/Low.

### 7.4.2 Current Scaling

The value of the sense resistors and analog conditioning circuitry shown in <u>Figures 7-5 - 7-7</u> determine the overall controllable current range of the switching amplifier. The overall current sense range should be 25% to 50% above the largest expected peak current. The commandable current range is 80% of the total current sense range.

**Example:** A brushless DC motor application will allow a peak current in each phase of 7.5 amps. The total current sense is selected as +/-10.0 amps, which gives a commandable range of +/-8.0 amps (80% of the total current sense range). A sense resistor and op amp are used to generate +/-1.65 volts for the desired current range of +/-10 amps giving a current scaling of 10.0 amps/1.65 volts or 6.06 amps/volt.

Motor currents are read using the GetCurrentLoopValue or GetFOCValue command. The returned value is a signed twos-complement number with a full scale negative current value of -20,480, a zero current value of 0, and full scale positive value of +20,480. This same scaling is used to set as well as read quantities that represent motor currents.

**Example:** In the above system, the scaling of measured current to current in counts is 10.0 amps / 20,480 counts = .488 mA/count. To set an  $I^2t$  continuous current of 3.5 amps a value of 3,500 mA / .488 mA/count = 7,172 counts is used.

### 7.4.3 Minimum Current Read Time

When controlling Brushless DC motors with FOC (field oriented control) current control mode selected Juno's minimum current read time parameter is used to insure a valid leg current reading when two of the three phases have a saturated PWM signal. This period of time is affected by the analog processing circuitry. It can be approximated by taking the electrical time constant and multiplying by 3 to 5.



The Juno IC default value for minimum current read time is set to be maximally safe but is not optimum for all analog processing hardware. For proper amplifier function these values must be set with values appropriate for the current sensor circuitry being used.

### 7.4.4 Leg Current Analog Calibration

To improve efficiency and motion smoothness it is important that the leg current inputs on signals *CurrentA-D* represent the actual current value as accurately as possible.

To facilitate this Juno provides the ability to zero-out analog input offsets that may exist while the motor coils are not being driven by the amplifier and the motor is not moving.

The simplest way to do this is to send a **CalibrateAnalog** command to Juno. This command will automatically measure and set the offsets so that the leg current analog inputs are zeroed out. Because a number of samples are taken and averaged, 100 mSec should be allowed for this command to complete. In addition, the operating mode should be set to motor output only before this command is executed.

Alternatively, it is possible to directly read each analog input via the **ReadAnalog** command and then write the same values for the corresponding analog offsets using the **SetAnalogCalibration** command. When using this manual method it is recommended that a number of analog reads of each signal are averaged together to improve the offset accuracy.

Regardless of how the analog offsets are determined, unless explicitly stored into NVRAM they will not be retained after a reset or power cycle. For more information on NVRAM configuration storage see Section 7.9.2, "Non-Volatile RAM."

### 7.4.5 Current Control Parameters

There are a number of Juno IC parameters which are used to set or control current control shown in Figures 7-5 - 7-7.

| Parameter                    | Range & Units            | Description   |
|------------------------------|--------------------------|---|
| Analog Current Offset A-D    | -32,767 to 32,768 counts | The analog offset 'zero offset values' are determined when<br>the amplifier is switching with a zero current command. The<br>offsets are generally specific to the external circuitry of each<br>leg current sensor, and should be separately zeroed out for<br>best performance. These parameters are set using the<br>SetAnalogCalibration command or via the CalibrateAnalog<br>command. The default values for these parameters are<br>zero.  |
| Minimum Current Read<br>Time | 0-32,767 nSec            | When using Brushless DC motors if two of three legs are<br>driven at 100% the analog current reading of the second leg<br>low-side switch needs to be active for a minimum amount<br>of time for a valid current reading. This parameter, set using<br>the SetDrivePWM command, specifies the amount of time<br>needed for a valid analog current read when the drive is in<br>this condition. This parameter has units of nSecs. The<br>default value for this parameter is 32,767 nSec. |

The following table summarizes these amplifier-related control parameters.

## 7.5 Drive & DC Bus Safety

Juno family ICs provide sophisticated DC Bus management and safety features. These features include overtemperature monitoring, over and under voltage monitoring, overcurrent monitoring, and shunt control.

The following table shows the signals that are used in connection with these features.

|                  | 64-Pin TQFP | 56-Pin VQFN |                         |
|------------------|-------------|-------------|-------------------------|
| Pin Name         | Pin#        | Pin#        | Description             |
| Temperature      | 9           | 7           | Measured Temperature    |
| BusVoltage       | 13          | 11          | Measured Bus voltage    |
| BusCurrentSupply | 10          | 8           | Measured DC Bus Current |
| Shunt            | 49          | 33          | Shunt Switch            |

The following sections provide detailed operational, connection, and configuration information for these DC Bus and safety related features.

### 7.5.1 Overtemperature Protection

Juno supports a *Temperature* sensor input to continuously monitor the temperature of the power electronics or another part of the drive. Although various temperature sensors may be used with Juno, the most common type of sensor is a thermistor.

When using a thermistor the *Temperature* input signal should be filtered to minimize noise. The *Temperature* input is sampled by Juno at a rate of 1kHz or higher, and therefore a low pass filter with a rolloff at 500 Hz or lower is recommended.

#### 7.5.1.1 Typical Overtemperature Processing Circuitry



Figure 7-12 shows a typical signal processing circuit for use with the *Temperature* input. The thermistor is a 10k NTC temperature-voltage-decreasing type. C1 is referenced to analog ground and should be placed close to the *Temperature* pin of the Juno IC. R3 is optional. It can provide additional filtering to improve noise immunity if needed.

See <u>Section 8.10, "Drive-Related Safety and Monitoring Features"</u> for a complete example schematic of temperature input using Juno.

#### 7.5.1.2 Overtemperature Scaling, Reading and Writing

The value of the temperature sensor and downstream analog conditioning circuitry determine the overall temperature range that can be measured. The overall temperature sense range should be 15% to 25% above the highest expected temperature.

The *Temperature* signal input expects a voltage in the range of 0V to 3.3V representing the sensed temperature. Both temperature-voltage-increasing (voltage increases with increasing temperature) and temperature-voltage-decreasing (voltage decreases with increasing temperature) thermistors are supported. For voltage increasing thermistors 0.0V represents the lowest possible temperature, and for voltage decreasing thermistors 3.3V represents the lowest possible temperature.

The measured temperature can be read using the **GetDriveValue** command. The returned value is an unsigned number with a range from 0 to 32,767. The returned temperature is direction adjusted, meaning for both voltage-increasing and voltage-decreasing thermistors a zero return value indicates the lowest possible temperature and a 32,767 represents the highest possible temperature.

The overtemperature threshold is set using the SetDriveFaultParameter command. The sign of the overtemperature threshold selects whether the *Temperature* input increases or decreases with rising temperature; positive thresholds indicate voltage increase while negative thresholds indicate voltage decrease. The actual limit threshold utilized by Juno for the comparison is the absolute value of the specified limit value.

In addition to the settable overtemperature Juno supports a settable temperature hysteresis. This function is used to avoid spurious re-triggering of an overtemperature event. The temperature hystersis value is set using the **SetDriveFaultParameter** command.

Figure 7-12: Overtemperature Processing Circuitry **Example:** A temperature-voltage-increasing thermistor and associated analog processing circuitry generate a voltage of 2.9V when the switching bridge circuitry is at the hottest safely operable temperature. The overtemperature limit specified using the **SetDriveFaultParameter** command should thus be set to 32,768 \* 2.9V/3.3V = 28,796.

The overtemperature functions continuously once programmed. To disable the overtemperature check a threshold value of 32,767 is set.

Converting Juno-readable values to an actual temperature in units of degrees C is often complex. For this reason Juno's overtemperature protection mechanism compares directly against the unconverted temperature value in units of counts, not units of degrees C.

## 7.5.2 Overcurrent Monitoring



Figure 7-13 shows the DC bus monitoring scheme used with the Juno IC. Juno monitors both the supply-side and return-side DC bus current to detect overcurrent conditions. Each can measure somewhat different overcurrent conditions. Supply side current measurement detects all excessive current flow including shorts of the motor windings to ground, shorts of the windings to each other, or a stalled rotor. Return current measurement can not measure shorts to ground, but can measure winding shorts to each other and a stalled rotor.

The **BusCurrentSupply** signal directly encodes the total current flowing through the motor amplifier bridge(s) from the +HV supply. The return-side overcurrent monitoring occurs via the leg current sensors also used during current control.

1

Figure 7-13: Overcurrent Monitoring Circuitry The DC bus current supply sensor typically consists of a sense resistor, as shown in Figure 7-13, or a linear Hall sensor. The analog processing circuitry required for each is somewhat different. If a dropping resistor is used an isolating operational amplifier, current mirror, or similar circuit should be used. Linear Hall sensors typically use just a ground-referenced operational amplifier.

The *BusCurrentSupply* input range is 0.0V to 3.3V with 0.0V representing no (zero) current flowing and 3.3 volts representing the maximum measurable amount of current flowing. The signal should be filtered to minimize noise, and the source impedance of the signal conditioning circuit should be less that 100 ohms. Current inputs are sampled by a dedicated high speed circuit internal to the Juno IC. To minimize false positives a low pass filter with a rolloff of 200 kHz - 500 kHz is recommended with a typical value of 350 kHz.

#### 7.5.2.1 Typical Overcurrent-Processing Circuitry

Figure 7-14: DC Bus Monitoring Circuitry



Figure 7-14 shows a typical processing circuit for DC Bus voltage and **BusCurrentSupply** over current sensing. The bus current sensing includes R1, U1, U2A and related passive parts. U1 is a high-side bus current sensing IC, and its output on R7 represents the bus current.



Although it is possible to trace and read the value of the supply current input the resultant readings may be noisy due to the switching activity of the PWM drive. If a trace or read value for this signal is desired a peak holding circuit may be added with a hold time of 100µsec.

During motor deceleration or other motion conditions it may be possible for the DC bus supply current flow to be negative. Care should be taken to insure that negative currents do not generate a negative voltage at Juno's BusCurrentSupply analog input pin. This is generally accomplished via a diode. See <u>Section 8.10, "Drive-Related</u> <u>Safety and Monitoring Features</u>" for examples of DC bus safety-related schematics.

See <u>Section 8.10, "Drive-Related Safety and Monitoring Features"</u> for complete example schematics of Juno-based DC bus overcurrent protection designs.

#### 7.5.2.2 DC Bus Supply Current Scaling, Reading and Writing

The value of the sense resistor and downstream analog conditioning circuitry determine the overall current range that can be measured. For the DC bus supply current input this range should be approximately double the maximum

expected DC bus peak current flow. Note that in the case of step motors the maximum DC bus current is 150% of the peak phase current.

The measured bus supply current can be read using the **GetDriveValue** command. The returned value is an unsigned 16-bit number with range of 0 to 65,535. The DC bus supply overcurrent threshold is set using the **SetDriveFaultParameter** command. Typical threshold settings are 75-95% of the current sense range.

**Example:** An isolating op-amp and sense resistor generate 3.3V at a DC bus supply current flow of 15 amps. The scaling of current reads is 15.0A/65,536 = .228 mA/count. The overcurrent threshold is set at 12.0 amps, or 12,000 mA/.228 mA/count = 52,631.

The DC Bus supply overcurrent threshold function operates continuously once programmed. To disable an overcurrent check a threshold value of 65,535 is set.

#### 7.5.2.3 DC Bus Return Overcurrent Measurement

Return current flow from the DC bus is measured via the leg current sensors as part of the current control mechanism. See <u>Section 7.4.2, "Current Scaling</u>" for more information on leg current scaling.

The bus return current can be read using the GetDriveValue command. The returned value is an unsigned 16-bit number with range of 0 to 20,480. The DC bus return overcurrent threshold is set using the SetDriveFaultParameter command.

The DC Bus return overcurrent threshold function operates continuously once programmed. To disable an overcurrent check a threshold value of 32,767 is set.

Return current measurement is only available when the motor output mode is set to PWM High/Low.





## 7.5.3 DC Bus Voltage Monitoring

Juno can monitor the DC bus voltage for overvoltage and undervoltage conditions utilizing the **BusVoltage** analog input signal. Overvoltage and undervoltage detection is accomplished by checking the measured voltage of the DC bus and comparing with user-provided thresholds.

If current control is not implemented then it is not possible for the Juno IC to measure DC bus return current. DC bus supply current measurement is not affected however and can function with or without current control

The DC Bus voltage sensor typically consists of a voltage divider, which may be created from an isolating operational amplifier, current mirror, or similar circuit.

The **BusVoltage** signal should be filtered to minimize noise. The DC bus voltage input is sampled by Juno at a rate of 20kHz, and therefore a low pass filter with a rolloff of 10 kHz or less is recommended.

#### 7.5.3.1 DC Bus Voltage-Related Circuitry

Figure 7-14 shows a typical processing circuit for DC Bus voltage monitoring. The bus voltage sensing consists of R2, R4 and C1. R2 and R4 scale the bus voltage, between 0 and 3.3V. C1 is referenced to analog ground and should be placed close to the *BusVoltage* pin of the Juno IC.

active.

See <u>Section 8.10, "Drive-Related Safety and Monitoring Features"</u> for complete example schematics of Juno-based DC bus management designs.

#### 7.5.3.2 DC Bus Voltage Scaling, Reading and Writing

The value of the sense resistor and downstream analog conditioning circuitry determines the overall voltage measurement range. This overall voltage range should be 15% to 50% above the maximum expected DC bus voltage.

The **BusVoltage** input range is 0.0V to 3.3V, with 0.0V representing a DC bus voltage of 0V, and +3.3V representing the largest measurable DC bus voltage. The measured bus voltage current can be read using the **GetDriveValue** command. The returned value is an unsigned 16-bit number with range of 0 to 65,535. The over and undervoltage thresholds are set using the **SetDriveFaultParameter** command, and have the same units.

**Example:** In an application that will have a motor voltage of 48 volts, external circuitry has been selected to present 3.3V at the *BusVoltage* input when the DC bus voltage is 65 volts. The scaling is 65V/65,536 or .992 mV/count. To set an undervoltage threshold of 45V a value of 45,000 mV/.992 mV/count = 45,362 is specified. To set an overvoltage threshold of 52V a value of 52,000 mV/.992 mV/count = 52,419 is specified.

The under and overvoltage thresholds function continuously. To disable the under voltage or over voltage check, threshold values are set to 0 or 65,535 respectively.

### 7.5.4 Shunt Resistor

The shunt function is used with DC Brush and Brushless DC motors only. As shown in Figure 7-13 Juno controls a shunt PWM output, which in turn typically drives a MOSFET or IGBT switch which connects the voltage to the DC bus ground via a power resistor, thereby lowering the DC bus voltage.

The shunt functions by continually comparing the DC bus voltage, as presented at the **BusVoltage** signal, to a user programmable threshold. If the DC bus voltage exceeds the comparison threshold the **Shunt** signal outputs a PWM waveform at a user programmable duty cycle. This PWM frequency is equal to the motor drive PWM frequency. Once active, shunt PWM output will stop when the DC bus drops to 2.5% below the threshold comparison value.

Once programmed, the shunt comparison function operates continuously. To disable it, a value of 32,767 should be programmed. The shunt function is not active when motor output is not enabled (the active operating mode output bit is not set).

#### 7.5.4.1 Shunt Related Circuitry

The shunt resistor connected should have a resistance such that the current flow through the shunt switch, diode and resistor do not exceed the ratings of those components at the expected DC bus voltage.

The diode, which is connected in parallel to the resistor, should have a voltage and current rating at least equal to those of the switch. See Figure 7-13 for more information.

#### 7.5.4.2 Shunt Reading and Writing

To set the shunt DC bus voltage comparison threshold the **SetDriveFaultParameter** is used. The scaling and units are the same as for the over and undervoltage functions. The shunt PWM duty cycle is set using the **SetDriveFaultParameter** command, and the provided value is an unsigned 16-bit number with range of 0 to 32,767.

**Example:** In the system from the example in <u>Section 7.5.3.2</u>, "DC Bus Voltage Scaling, Reading and Writing" the shunt will be activated when the DC bus voltage climbs to 51 volts with a duty cycle of 95%. The shunt comparison threshold is set to 51,000 mV/1.98 mV/count = 25,757 and the duty cycle value is .95 \* 32,768 = 31,130.

It is possible to determine whether the shunt output is active at any given moment. To do this the command GetDriveStatus is used.

## 7.6 Host Communications

Juno ICs support host communications using point-to-point and multi-drop asynchronous serial, CANbus 2.0, and SPI (Serial Peripheral Interface). However not all Juno ICs support all host communications modes. This is shown in the table below:

| Juno IC Type       | P/Ns                                    | Serial<br>Point-to-point | Serial<br>Multi-drop | CANbus       | SPI*         |
|--------------------|---|--------------------------|----------------------|--------------|--------------|
| Velocity control   | MC71113, MC73113, MC78113               | $\checkmark$             | $\checkmark$         | $\checkmark$ | $\checkmark$ |
| Torque control     | MC71112, MC71112N, MC73112,<br>MC73112N | $\checkmark$             |                      |              |              |
| Step motor control | MC74113, MC74113N, MC75113,<br>MC75113N | $\checkmark$             |                      |              |              |

\*while Juno torque control and step motor control ICs do not support SPI for host communications, they do provide SPI input for command value input or for sensor reading input.

Below are descriptions of each of the host communication ports supported by Juno ICs.

### 7.6.1 Serial

Juno series ICs provide two overall serial communication modes; point to point (used with RS232 or RS422), and multi-drop (used with RS485). All of Juno's serial-related signals are digital TTL level signals, so for typical cable-based use of these communication modes external transceiver chips are used. See <u>Section 8.6</u>, "Serial Communication Interface (SCI)" for example schematics for serial communications.

The table below provides a summary of the signals used with serial communications:

| Pin Name  | 64-Pin TQFP<br>Pin# | 56-Pin<br>VQFN Pin# | Description  |
|-----------|---------------------|---------------------|--|
| SrlRcv    | 32                  | 28                  | Serial Receive inputs the serial data for all serial modes.  |
| SrlXmt    | 27                  | 24                  | Serial Transmit outputs the serial data for all serial modes.  |
| SrlEnable | 61                  | -                   | SrlEnable is held high in point-to-point mode. In multi-<br>drop mode SrlEnable is high during transmission only.<br>This function is not supported in the 56-pin VQFN pack- |
|           |                     |                     | age.   |

By default Juno powers up in point to point communication mode at 56 Kbaud. This configuration information can be changed via the SetSerialPortMode command.

### 7.6.2 CANbus

Juno ICs provide CANbus 2.0 compatible communications. All of the Juno CANbus-related signals are digital TTL level signals, so for typical cable-based use of this communication mode external transceiver chips are used. See <u>Section</u> 8.7, "CAN Communication Interface" for example schematics for CANbus communications.

The table below provides a summary of Juno signals used with CANbus communications. Note that CANbus communications are not supported in the 56-pin VQFN package.

| Pin Name | 64-Pin TQFP<br>Pin# | 56-Pin<br>VQFN Pin# | Description                            |
|----------|---------------------|---------------------|--|
| CANRcv   | 26                  | -                   | CANbus receive inputs the CANbus data  |
| CANXmt   | 25                  | -                   | CANbus transmit output the CANbus data |

Juno will coexist (but not communicate) with CANOpen nodes on that network. Juno uses CAN to receive commands, send responses, and (optionally) send asynchronous event notifications and uses different addresses for each as indicated in the table below:

| Message Type       | CAN Address    |
|--------------------|----------------|
| Command received   | 0x600 + nodelD |
| Command response   | 0x580 + nodelD |
| Event Notification | 0x180 + nodelD |

By default the Juno CANbus nodeID is 0, and the CAN baud rate is 20,000. This configuration information can be changed via the SetCANMode command.

### 7.6.3 SPI (Serial Peripheral Interface)

Juno ICs provide SPI communications both for host communications, and for direct input commands such as the continuous instantaneous desired velocity or torque. For more information on the formatting of SPI host communications refer to the *Juno Velocity & Torque Control IC User Guide*.

All of the SPI-related signals are digital TTL level signals. Some applications may directly connect microprocessors, FPGAs, or other on-board logic to these signals. Other applications, depending on signal lengths and noise level may benefit from external drivers to improve signal integrity of the SPI bus. See <u>Section 8.8</u>, "SPI Communication Interface" for example schematics for SPI communications.



SPI is a serial hardware bus intended for communications within a PCB substrate only. It is not recommended for board to board communications. It is the responsibility of the user to insure the signal integrity of the SPI bus for the application in which it is used.

Juno's SPI interface utilizes three digital input pins *SPIEnable*, *SPSIClock* and *SPIRcy*, and two digital output pins *SPIXmt* and *SPIStatus*. These signals represent the standard SPI enable, chip select, clock, and data functions, along with a protocol packet processing status indicator. The Juno IC acts as an SPI slave, and the host processor acts as an SPI master.

The table below provides a summary of the Juno IC signals used with SPI communications or direct input commands.

| Pin Name  | 64-Pin TQFP<br>Pin# | 56-Pin<br>VOEN Pin# | Description and when used  |
|-----------|---------------------|---------------------|--|
| Fill Name | F II 1#             |                     | Description and when used  |
| SPIRcv    | 36                  | 31                  | SPIRcv inputs synchronous serial data for the SPI bus  |
| SPIXmt    | 34                  | 30                  | SPIXmt transmits synchronous serial data for the SPI bus   |
| SPIClock  | 33                  | 29                  | SPIClock inputs the clock signal used with synchronous serial transfer on the SPI bus  |
| SPIEnable | 44                  | 39                  | SPIEnable inputs an enable for SPI bus communications  |
| SPIStatus | 61                  | -                   | SPIStatus is used during host communications to synchro-<br>nize host commands with responses. It is not used with<br>direct input SPI commands. |

For complete electrical timing information for all SPI bus operations see Section 3.2.3, "Host SPI."

## 7.7 Input Signal Processing

### 7.7.1 Quadrature Encoder Signals

Incremental encoder input along with an index pulse and associated high speed capture system is supported by all members of the Juno family except MC75113 and MC75113N. All of the Juno encoder related signals are digital TTL level signals, so for typical cable-based connection to a motor encoder differential transceiver chips are used.

*QuadA* and *QuadB* are expected to be offset from each other by 90 degrees, as shown in Figure 7-15. When the motor moves in the position direction, *QuadA* should lead *QuadB*. When the motor moves in the negative direction *QuadB* should lead *QuadA*. Four resolved quadrature counts occur for one full phase of each A and B channel.

The Index signal provides a capture trigger for the instantaneous up/down quadrature position.

The table below provides a summary of the Juno signals encoder related functions.

|          | 64-Pin TQFP | 56-Pin    |              |
|----------|-------------|-----------|--------------|
| Pin Name | Pin#        | VQFN Pin# | Description  |
| QuadA    | 62          | 55        | Quad A input |
| QuadB    | 63          | 56        | Quad B input |
| Index    | 4           | 2         | Index input  |

By default the Index capture signal is active low. This default value can be changed via the SetSignalSense command.

### 7.7.2 Typical Quadrature Encoder Processing Circuitry



Figure 7-15 shows a typical circuit for processing differential quadrature and index signals. The pull-up and pull-down resistors provide both termination and a bias voltage. When single ended encoder signals are used connect to the positive input and leave the negative input unconnected.

### 7.7.3 Pulse & Direction

*Pulse & Direction* along with *AtRest* input is supported by all members of the Juno IC family except MC71112, MC71112N, MC73112, and MC73112N. All of these signals are digital TTL level, so for typical cable-based connection buffering circuits are recommended.

Figure 7-15: Quadrature Encoder Processing Circuitry

| Pin Name  | 64-Pin TQFP<br>Pin# | 56-Pin<br>VQFN Pin# | Description   |
|-----------|---------------------|---------------------|---|
| Pulse     | 33                  | 29                  | Pulse provides a step command signal for the pulse & direction position command input source.   |
| Direction | 36                  | 31                  | Direction indicates the direction of motion for the pulse & direction position command input source.  |
| AtRest    | 35                  | 23                  | AtRest indicates that the axis is at rest and not actively<br>moving. It is used to select between the 'in motion' pro-<br>grammable step motor torque levels and the 'at rest'<br>level. |

The table below provides a summary of the Juno pulse & direction related signals:

By default the *Pulse* signal is active low. This configuration information along with interpretation of the *Direction* and *AtRest* signals can be changed via the *SetSignalSense* command.

#### 7.7.3.1 Typical Pulse & Direction Processing Circuitry

Figure 7-16: Pulse & Direction Processing Circuitry

7



<u>Figure 7-16</u> shows a typical circuit for processing the *Pulse* & *Direction*, and *AtRest* signals. The buffered signals are inverted and have a pull-down resistor at the *AtRest* input so the output of the buffer is low to ensure a deterministic state when *AtRest* is unconnected.

### 7.7.4 Hall Sensors

Although not required by Juno, Hall signals are commonly used when driving Brushless DC motors. All of the Juno Hall signal inputs are digital TTL level signals, so for typical applications external signal processing circuitry is used.

The table below provides a summary of the Juno Hall-based signals.

|          | 64-Pin TQFP | 56-Pin    |             |
|----------|-------------|-----------|-------------|
| Pin Name | Pin#        | VQFN Pin# | Description |
| HallA    | 35          | 23        | HallA input |
| HallB    | 31          | 42        | HallB input |
| HallC    | 64          | 34        | HallC input |

There is some variation in how typical motors are wired, so for convenience Juno provides the ability to change the signal sense interpretation of these incoming signals.

### 7.7.4.1 Typical Hall Processing Circuitry



Figure 7-17 shows a typical circuit for processing Hall sensor signals. The 4.7k resistor pull-up resistor is required when the Hall signals are open-collector. The 22k resistor and 33pF capacitor provide a low-pass filter with a bandwidth of 219 kHz. The selection of the low-pass filter bandwidth depends on noise and Hall signal frequency. This buffer stage has an inversion on its output.

### 7.7.5 AnalogCmd & Tachometer

Juno supports input of an *AnalogCmd* direct input signal to provide a bi-polar desired velocity or torque command for the motor or actuator being controlled. In addition a *Tachometer* input signal can be used to provide velocity feedback to the Juno IC.

The table below provides a summary of the AnalogCmd & Tachometer signals.

| Pin Name   | 64-Pin TQFP<br>Pin# | 56-Pin<br>VQFN Pin# | Description                                    |
|------------|---------------------|---------------------|--|
| AnalogCmd  | 18                  | 18                  | Analog torque or velocity command input        |
| Tachometer | 24                  | -                   | Analog velocity feedback used by velocity loop |

### 7.7.5.1 AnalogCmd

The analog input range is 0.0V to 3.3V with the maximum positive command represented with a value of 3.3V, the maximum negative command having a value 0.0V, and a command value of 0 having a value of 1.65V.

On-board circuitry that directly outputs an analog signal in a compatible format may directly connect to the Juno input pin. External connections via cable require on-board signal conditioning to insure proper scaling and filtering.

The *AnalogCmd* input is sampled by Juno at a rate of 20kHz and therefore a low pass filter with a rolloff at 50kHz - 200kHz is recommended.

### 7.7.5.2 Tachometer

Juno supports input of a *Tachometer* signal which provide a bi-polar measured velocity for the motor or actuator being controlled. All aspects of voltage range and scaling for this signal are the same as for the *AnalogCmd* signal. The analog input range at the Juno IC is 0.0V to 3.3V and the maximum and minimum velocity feedback readings have a value of 3.3V and 0.0V respectively. See Figure 7-18 for an example schematic that inputs from an external circuit with a range of +/-10 V.

In addition to measuring motor velocity, the *Tachometer* signal can also be used to input outer loop quantity measurements such as pressure, or temperature. See the *Juno Velocity & Torque Control IC User Guide* for more information on outer loop controller function.



Figure 7-17: Typical Hall Processing Circuitry Figure 7-18:

AnalogCmd

Tachometer Circuitry

and

#### 7.7.5.3 Typical AnalogCmd & Tachometer Processing Circuitry



Figure 7-18 shows a typical circuit for processing +/-10V differential input command or tachometer signals. The output has an offset of 1.65V corresponding to a zero command. The bandwidth of this circuit is 23.4kHz. The 100ohm resistor and 2.2nF capacitor should be placed close to the *AnalogCmd* input pin of the Juno IC. All resistors used should be 1% or higher grade. All capacitors should be X7R or higher grade.

#### 7.7.5.4 AnalogCmd & Tachometer Scaling and Reading

The value of the analog command and downstream analog conditioning circuitry determine the overall velocity or torque command range that can be specified. In addition however, Juno's *AnalogCmd* signal provides a programmable gain factor called Kanalogcmd. The allowed settings are from 0.0 to 1.0 (unity scaling).

**Example:** Analog processing circuitry converts a +/-10V signal to the full scale of the 0 to 3.3V input range. An incoming signal voltage of -7.0V is received, representing a request for 70% of available maximum velocity or torque in the negative direction. This incoming signal results in a voltage of 0.495V at Juno's *AnalogCmd* pin. With a unity setting of Kanalogcmd (1.0) this results in a numerical command value of -22,937.

For additional information on AnalogCmd & Tachometer scaling along with Kanalogcmd, refer to the Juno Velocity & Torque Control IC User Guide.

## 7.8 Reset

Juno ICs require various conditions to be present on the Reset and ClkIn pins for proper reset and powerup.

In particular, for the Juno ICs which have a *ClkIn* signal (MC71113, MC73113, and MC78113), *ClkIn* must be kept in a high impedance state during powerup until the MC78113's Vcc and AnalogVcc stabilize.

The table below provides a summary of the Juno reset related signals:

| Pin Name | 64-Pin TQFP<br>Pin# | 56-Pin<br>VQFN Pin# | Description                                     |
|----------|---------------------|---------------------|---|
| Reset    | 7                   | 5                   | Reset input                                     |
| ClkIn    | 45                  | -                   | Clock input. Not used with 56-pin VQFN package. |
#### 7.8.1 Typical Reset Processing Circuitry



Figure 7-19: Typical Reset Processing Circuitry

<u>Figure 7-19</u> shows a typical reset circuit for the Juno ICs that have a *ClkIn* signal. Although included in this circuit, external control of the *Reset* signal is not required since the Juno will trigger an internal reset upon power up. The  $\sim$ *Reset* pin is driven low by Juno under a power-on or reset condition. <u>Figure 7-19</u> uses  $\sim$ *Reset* signal to meet the *ClkIn* high impedance requirement. At power on, Juno pulls down  $\sim$ *Reset* signal and puts X1 output to high impedance. If external reset is implemented an open-drain device is used. If no external reset is implemented, Q1 from the above circuit is eliminated.

For Juno ICs that do not have a *ClkIn* signal (MC71112, MC711112N, MC73112, MC73112N, MC74113, MC75113, MC74113N, and MC75113N) in the above circuit X1 and the connected circuitry is eliminated.

#### 7.8.2 Power-up and Initialization

A power-up where no user-provided initialization parameters have been stored in NVRAM takes approximately 250mSec. At the end of this sequence all parameters are at their default values, and both the current loop module and the power stage module are disabled. At this point Juno is ready to receive commands and begin operation.

Juno also supports the ability to store initialization parameters that are automatically applied during the power up sequence. For this purpose, a 1,024 word memory that is non-volatile (NVRAM) is provided.

If the non-volatile initialization memory has been loaded with initialization information Juno detects this and begins executing the commands stored in the non-volatile memory. Once execution of these commands is completed, Juno initialization is done and normal operation begins. Note that processing stored commands may increase the overall initialization time depending on the command sequence stored.

See Section 7.9.2, "Non-Volatile RAM" for more information on the Juno's NVRAM.

## 7.9 Juno RAM and NVRAM

Juno provides two user-accessible types of memory storage, a 6,144 16-bit word RAM used primarily for trace and a 1,024 16-bit word NVRAM used primarily to store initialization configuration parameters. The RAM will be lost upon a power cycle or reset function while the NVRAM is permanent and will be retained even after a power cycle.

For more information on June IC memory buffers and trace, see the Juno Velocity & Torque Control IC User Guide.

#### 7.9.1 Trace RAM

Juno's internal RAM volatile memory is most often used for performance trace, but it may also be used for general purpose storage of user-specified data. All RAM access occurs via the MC78113's buffer access commands. Buffer access commands allow memory areas to be written to and read from the memory areas using different word sizes. In addition all trace operations use buffers to specify where the trace data will be written to and read from.

The starting address of the Juno's RAM is 0. For convenience Juno's RAM memory area is pre-defined as BufferID #0

To learn more about Juno's buffer access commands and very powerful trace features for tuning and performance optimization refer to the Juno Velocity & Torque Control IC User Guide.

#### 7.9.2 Non-Volatile RAM

Juno supports a memory segment that is non-volatile (NVRAM). The primary purpose of the NVRAM is to allow Juno configuration information to be stored, so that upon power up it can be loaded automatically rather than requiring an external controller to perform this configuration initialization function.

The starting address of Juno's NVRAM is 0x2000 0000. For convenience the NVRAM memory area is pre-defined as BufferID #1.

All data stored in the Juno NVRAM utilizes a data format known as PMD Structured data Storage Format (PSF). Users who rely only on PMD's Pro-Motion software package to communicate with Juno and store and retrieve initialization parameters need not concern themselves with the details of PSF. Users who want to address the NVRAM from their own software, or who want to create their own user-defined storage should refer to the *Juno Velocity & Torque Control IC Programming Reference* for detailed information on PSF. For information on loading information into the Juno NVRAM refer to Section 6.1, "Loading the NVRAM."

## 7.10 Output Signal Status During Powerup

The following table summarizes the Juno IC's output signal states during power up and after powerup when no initialization data is stored in the NVRAM.

|                     | 64-Pin<br>TOFP | 56-Pin<br>VOFN | State during | State after                                |
|---------------------|----------------|----------------|--------------|--|
| Pin Name            | Pin#           | Pin#           | powerup      | power up                                   |
| PWMHighA/PWMMagA    | 56             | 49             | Tri-stated   | Tri-stated                                 |
| PWMLowA/PWMSignA    | 55             | 48             | Tri-stated   | Tri-stated                                 |
| PWMHighB            | 54             | 47             | Tri-stated   | Tri-stated                                 |
| PWMLowB             | 53             | 46             | Tri-stated   | Tri-stated                                 |
| PWMHighC/PWMMagC    | 51             | 45             | Tri-stated   | Tri-stated                                 |
| PWMLowC             | 50             | 44             | Tri-stated   | Tri-stated                                 |
| PWMHighD            | 39             | 34             | Tri-stated   | Tri-stated                                 |
| PWMLowD             | 38             | 33             | Tri-stated   | Tri-stated                                 |
| AmplifierEnable     | 3              | 22             | Pulled high  | Driven low                                 |
| Shunt               | 49             | 33             | Tri-stated   | Tri-stated (until out-<br>put mode is set) |
| FaultOut            | 52             | 40             | Tri-stated   | Driven low                                 |
| SrlXmt              | 27             | 24             | Pulled high  | Pulled high                                |
| CANXmt              | 25             | -              | Pulled high  | Pulled high                                |
| SrlEnable/SPIStatus | 61             | -              | Pulled high  | Driven low                                 |

| Pin Name       | 64-Pin<br>TQFP<br>Pin# | 56-Pin<br>VQFN<br>Pin# | State during<br>powerup | State after<br>power up |
|----------------|------------------------|------------------------|-------------------------|-------------------------|
| SPIXmt         | 34                     | 30                     | Pulled high             | Driven low              |
| ~HostInterrupt | 46                     | 43                     | Pulled high             | Driven high             |

If configuration data has been stored in the Juno's NVRAM then the final powerup condition of various outputs signals may be affected. See the detailed description of the specific commands that are stored into the NVRAM for details.

<u>\</u>

See Section 7.9.2, "Non-Volatile RAM" for more information on NVRAM initialization storage.

## 7.11 Analog Signal Input

The following table summarizes the Juno's analog signals and indicates how they may be addressed during trace or for other operations such as **ReadAnalog**, or **SetAnalogCalibration** commands.

| Signal           | 64-Pin<br>TQFP<br>Pin # | 56-Pin<br>VQFN<br>Pin # | Channel |
|------------------|-------------------------|-------------------------|---------|
| CurrentA         | 14                      | 12                      | 0       |
| CurrentB         | 19                      | 16                      |         |
| CurrentC         | 12                      | 10                      | 2       |
| CurrentD         | 21                      | 18                      | 3       |
| Temperature      | 9                       | 7                       | 4       |
| BusCurrentSupply | 10                      | 8                       | 5       |
| BusVoltage       | 13                      | 11                      | 6       |
| AnalogCmd        | 18                      | 18                      | 7       |
| Tachometer       | 24                      | -                       | 8       |

If used, for best performance, it is highly recommended that the *CurrentA-D*, *AnalogCmd*, and *Tachometer* signals be calibrated and offset. See Section 7.4.4, "Leg Current Analog Calibration" for information on analog input offsetting.

For the *Temperature* and *BusVoltage* signals, offsetting is allowed but generally not necessary. The *BusCurrentSupply* signal does not support an offset calibration nor is one needed for proper functioning. For information on calibrating Juno analog inputs in your production application refer to <u>Section 6.2</u>, "Analog Signal Calibration in the Production Application."

Regardless of how the analog offsets are determined, unless explicitly stored into NVRAM analog offsets will not be retained after a reset or power cycle.



This page intentionally left blank.

# 8. Application Notes — MC78113

8

- General Design Notes
- Design Tips
- Power Supplies
- Clock Generator, Grounding and Decoupling
- Reset Signal
- Serial Communication Interface (SCI)
- CAN Communication Interface
- SPI Communication Interface
- Analog Inputs
- Drive-Related Safety and Monitoring Features
- Shunt Resistor Drive
- PWM High/Low Motor Drive With Leg Current Sensing/Control
- Using the TI LMD18200 to Drive DC Brush Motors
- Two Juno Step Motor Amplifiers With Multi-Axis Magellan
- Two Juno BLDC Motor Amplifiers With Multi-Axis Magellan

## 8.1 General Design Notes

Logic functions presented in the example schematics are implemented by standard logic gates. In cases where specific parameters are of significance (propagation delay, voltage levels, etc.) a recommended part number is given.

In the schematics, pins with multiple functions are referenced by the name corresponding to the specified functionality. For example, pin 56 on the MC78113 is named "PWMHighA/PWMMagA" but will be referenced by the name "PW-MHighA" in the PWM High/Low motor drive example and "PWMMagA" in the DC brush motor schematics.

The schematic designs presented in this chapter are accurate to the best of PMD's knowledge. They are intended for reference only and have not all been tested in hardware implementations.



### 8.1.1 Interfacing to Other Logic Families

When integrating different logic families, consideration should be given to timing, logic level compatibility, and output drive capabilities. The MC78113 is 3.3V CMOS input/output compatible and cannot be directly interfaced to 5V CMOS components. In order to drive a 5V CMOS device, level shifters from the 5V CMOS AHCT (or the slower HCT) families can be used. When using a 5V CMOS component to drive the CP, a voltage divider may be used or a member from the CMOS 3.3V LVT family may serve as a level shifter.

## 8.2 Design Tips

#### 8.2.1 Controlling PWM Output During Reset

When the MC78113 is in a reset state (when the reset line is held low), or immediately after a power on, PWM output will be in a high impedance state, which will provide design flexibility to prevent undesirable motor movement at system level. For example, when the power train is active high in PWM High/Low mode, pull-down resistors can be used to keep the power train off during reset and power up. For an active low power stage, pull-up resistors can be used.

#### 8.2.2 Thermal Considerations

The recommended operating junction temperature range for the MC78113 is between -40°C and 150°C. Proper thermal design will ensure the system reliability. Based on a simplified resistor model for heat transfer, following thermal matrices under different conditions are provided for thermal design.

| AIR FLOW (64-Pin TQFP Package)                |       |         |         |         |
|---|-------|---------|---------|---------|
| Parameter                                     | 0 lfm | 150 lfm | 250 lfm | 500 lfm |
| <sup>θ</sup> JA[ <sup>°</sup> C/W] High k PCB | 56.5  | 44.7    | 42.9    | 40.3    |
| <sup>ψ</sup> اک [ <sup>°</sup> C/w]           | 0.15  | 0.42    | 0.51    | 0.67    |

| AIR FLOW (56-Pin VQFN Package)                |       |         |         |         |
|---|-------|---------|---------|---------|
| Parameter                                     | 0 lfm | 150 lfm | 250 lfm | 500 lfm |
| <sup>θ</sup> JA[ <sup>°</sup> C/W] High k PCB | 34.8  | 23.6    | 22.3    | 20.5    |
| <sup>ψ</sup> اک [ <sup>°</sup> C/W]           | 0.24  | 0.36    | 0.43    | 0.56    |

 $\theta_{JA}$  is the junction-to-ambient thermal resistance. Although it is an important design reference, this thermal metric highly depends on the board design and system configurations. Directly using it for junction temperature estimation could result in misleading results because the environmental factors are different from design to design.

 $\psi_{jT}$  (junction to top of package) is provides as an useful thermal metric for estimating the in-situ junctional temperature. The environmental factors do not affect this metric as much, and it can be easily measured. Also, because  $\psi_{jT}$  is small, if a user chooses to, the top of package temperature might be approximated as the junctional temperature for design estimation when enough thermal design margin is included.

This page intentionally left blank.

## 8.3 Power Supplies

In the schematic shown in <u>Figure 8-1</u> the design is powered by an external +5VCC power source. The MC78113 requires a 3.3V supply input. +3.3Vs, the 3.3V digital supply, is generated by the TPS76733QPWPRG4, a 1.0 Amp fixed 3.3V low-dropout voltage regulator.

If the MC78113 analog-to-digital converter (ADC) is used it should be supplied with a filtered +3.3Vs supply.

The following is the list of supplies which are referenced in the example schematics within this application notes section of the manual:

• +3.3Vs and +3.3V\_Analog: +3.3Vs is the main digital supply for the MC78113 device. +3.3V\_Analog is the filtered version of the +3.3Vs supply for ADC and its related conditioning circuitry. The extra filtering is used to provide additional decoupling of the analog elements from the digital elements in the circuitry.

#### Notes:

- The power supplies schematic provided in <u>Figure 8-1</u> is for reference only, and is designed only to meet the requirements of the example schematics used in the application notes section of the manual. The actual supplies used should be designed according to the stability and precision requirements of the application.
- Power supplies for the motor drive amplifiers/switchers are not shown. Care should be taken when designing these power supplies, as they should be capable of sinking high switching currents.



MC78113

8





## 8.4 Clock Generator, Grounding and Decoupling

#### 8.4.1 Clock Generator – MC78113

An external 3.3V 10MHz clock oscillator output should be supplied to the MC78113's ClkIn pin.

During power up, the pin ClkIn could glitch. In Figure 8-2, MC78113's ~Reset pin is connected to ENB pin of the clock oscillator. During power up, ~Reset pin holds low and keeps the output of clock oscillator at high impedance to prevent I/O conflict.

#### 8.4.2 Grounding and Decoupling

As shown in Figure 8-2, each of the MC78113 digital supply voltage pins should be connected to the +3.3 Vcc. A minimum of 1.2uF capacitor should be used to decouple each Vcc pin. A 2.2uF ceramic capacitor is recommended. If the +3.3 Vcc source is noisy, additional ferrite bead can be placed in series with the decoupling cap to form a LC filtering network on the power pin.

Each of the "FltCap" pins should be connected to a minimum of 1.2uF filtering capacitor which in turn connects to ground. A 2.2uF ceramic capacitor is used in the schematic. The filtering capacitors must be placed as close as possible to each one of the "FltCap" pins. This general rule applies to all analog and digital components, although in some of the schematics that follow these capacitors are not shown for reasons of brevity. In some cases, especially for analog processing circuitry, it may be beneficial to run a separate power line from the power supply to the component in order to prevent power supply fluctuations from impacting low-level signal components.

The same points should be considered when designing the ground. A good board layout practice should have a star connection at one point in the power supply.

Additional filtering, such as ferrite beads, may be inserted between the analog and digital grounds to suppress high frequency ground noise. Some components, such as motor drivers, require special grounding. The system designer should refer to the component data sheets of selected components in order to ensure correct usage of the grounding methods.

#### 8.4.3 Decoupling of the On-chip ADC

The voltage supply to the ADC should be decoupled with a 2.2uF ceramic capacitor (typical) on the pin. It should be placed as close as possible to the ADC power supply input pins.



### 8.5 Reset Signal

The MC78113 chip has a built-in power supervisory circuitry that generates an internal reset signal when a power-on or brown-out condition occurs. As such, no external circuitry is needed to generate a reset input pulse. An R-C circuit must be connected to this pin for noise immunity reasons.

The supervisor reset release delay time is typically 600 µsec after the power-on or brown-out condition event is removed. If need be, an external circuit may also drive this pin to assert a device reset. In this case, it is recommended that this pin be driven by an open-drain device.

All digital output signals have an internal pullup except for *FaultOut* and the *PWM* signals. See <u>Section 7.10, "Output</u> <u>Signal Status During Powerup"</u> for more information. If the *AmplifierEnable* and *FaultOut* signals are used they should have an external pull down resistor to prevent any glitches during reset.

During the initialization period, the MC78113 is configured with the default initialization parameters for motor type, serial communication and CAN communication, analog offsets, control loop gains etc. If necessary, the MC78113's on chip non-volatile storage can be used to store user-programmed initialization parameters. For more information see the *Juno Velocity & Torque Control IC User Guide*.

## 8.6 Serial Communication Interface (SCI)

In this section the serial communication interface to the host is described. On power-up or after a reset, unless the on board non volatile storage has been used to store alternate defaults, the MC78113 configures the SCI to its default configuration of 57,600 baud, no parity, one stop bit, point-to-point mode.

This section demonstrates the use of RS-232 and RS-485 line-drivers for interfacing to a remote host.

#### 8.6.1 Asynchronous Serial Communications

When the host and motion control IC are located on the same physical board it is most likely that simply wiring the transmit and receive lines directly between the host and MC78113 chip is all that is required (assuming they are both 3.3V CMOS devices).

For communications between boards or modules TIA/EIA standards provide reliable communication over varying cable lengths and communication rates. The most commonly used standards are RS-232 and RS-485. These standards are separated into two categories: single-ended and differential. RS-232 is a single-ended standard allowing for moderate communication rates over relatively short cables. RS-485 is differential, offering higher data rates and longer cable runs.

Line drivers and receivers (transceivers) are commonly used in order to mediate between the cable interface and the digital circuitry signal levels. There are several design considerations that should be taken into account when deciding which of these two communication methods is the best fit for an application.

• Full-duplex vs. half-duplex

The terms full-duplex and half-duplex are used to distinguish between a system having two separate physical communications lines from one having one common line for transmission and reception.

• Line contention

This problem can occur in half-duplex systems. Most line-drivers supply physical protection against such conditions but there is no automatic recovery of lost data in these levels. When interfacing the MC78113 to a half-duplex communication system the designer should note that the turn-around time for command processing and response is at least 1 byte at the current baud rate. As a result the host should release the communication line before this time elapses so that contention can be avoided.

• Termination impedance

Long cables and/or high data rates require termination resistors if the transceiver is located at the end of the transmission lines. One way to determine if termination is required is if the propagation delay across the cable is larger than ten times the signaling transition time. If this condition is satisfied, then termination is required. The RS-485 standard specifies the signaling transition time to be less than 0.3 times the signaling period, thus imposing an upper limit on the maximum cable length for a specified baud rate.

The termination resistor should match the characteristic impedance of the cable with 20% tolerance. Resistors with a value of 80-120 are typically used. Note that for transceivers placed in the middle of the cable, no termination resistors are required. However, the stubs should be kept as short as possible to prevent reflections.

• Pin SrlEnable/SPIStatus at power up and reset

MC78113's SrlEnable/SPIStatus pin must be '1' at power up and reset; only pull-up resistor is allowed. In RS-485 communication, it would enable the line driver output and affect ongoing communication so hot swap operation is not supported.

The schematic in <u>Figure 8-3</u> employs the ADM3202 and ADM3491 transceivers as an example of RS-232 and RS-485 interfaces respectively. Other RS-232 transceivers may be used, such as Maxim's MAX3321E. The ADM3491 circuitry

can be configured for both full-duplex and half-duplex communications, and may include termination resistors. As an alternative, transceivers from the MAX307xE family may be used.

| The following table shows | configuration | options | for the ! | RS-422/485 | circuitry | of Figure 8-3: |
|---------------------------|---------------|---------|-----------|------------|-----------|----------------|
| ()                        | ()            |         |           | /          |           |                |

| Configuration               | Jumper Position | Application  |
|-----------------------------|-----------------|--|
| Half Duplex <sup>1</sup>    | JP1/2/3 in 2-3  | RS-422/485 in multipoint system  |
| Full Duplex                 | JP1/2/3 in 1-2  | RS-422/485 in point to point system  |
| Termination on <sup>2</sup> | JP4/5 in 1-2    | RS-422/485. For high transmission rates and/or long cable. Only when placed at the end of the cable. |
| Termination off             | JP4/5 in 2-3    | RS-422/485. For low transmission rates and short cable. Or when placed at the middle of the cable.   |

I. JP3 should only be placed be in the half duplex state (2-3) if multi-point communication is being used.

2. Note that the reference circuitry does not support resistance termination on the transmitting side when operated in full duplex because it is assumed that RS-422/485 will only be used in the half-duplex configuration.

Figure 8-3: Host

Communica-

tion, RS-232 and RS-485







0.1uF

5

C1 0.1uF

₹3.32 €.53

## 8.7 CAN Communication Interface

The following example illustrates an interface to a CAN backbone using TI's SN65HVD233 transceiver, which supports the ISO 11898 standard. This port can be operated at various communication rates from 10,000 to 1,000,000 bps (bits per second). In addition, each CANbus device is assigned three CAN identifiers (also called addresses); one for transmission of messages, one for reception of messages, and one for event messages. Generally, the CAN high-speed standard ISO 11898 provides a single line bus structure as a network topology. The bus line is terminated at both ends with a termination resistor of ~1200hms. Consult CAN ISO 11898 standard for more information on termination schemes and EMC considerations.

#### 8.7.1 CAN Configuration During Power-up or Reset

On power-up or after reset, the MC78113 configures the CAN controller to its default configuration: 20 kbps with a Node ID of 0. The MC78113's on board non-volatile storage can be used to store user-programmed initialization parameters. If a non-default CAN configuration is required, please contact PMD sales representative to learn more. PMD may ship MC78113s pre-loaded with user-specified parameters.

The RS pin of the SN65HVD233 provides for three modes of operation: high-speed, slope control, or low-power standby mode. This programmable input pin may be used to adjust the rise and fall times of the transmitter. This may be important in unshielded, low-cost systems in order to reduce electromagnetic interference. This pin provides three different modes of operation: high-speed, slope control, and low-power modes. The high-speed mode of operation is selected by connecting this pin to ground, allowing the transmitter output transistors to switch on and off as fast as possible with no limitation on the rise and fall slopes. The rise and fall slopes can be adjusted by connecting a resistor to ground at this pin, since the slope is proportional to the pin's output current. This slope control is implemented with external resistor values of 10kohms, to achieve a 15-V/µs slew rate, to 100 kohms, to achieve a 2-V/µs slew rate.

If transmitter's rise/fall times do not require adjusting, the RS pin should be tied to GND or the simpler SN65HVD232 can be used.



## 8.8 SPI Communication Interface

The MC78113 motion control IC supports SPI (Serial Peripheral Interface) for communications with a host processor such as a microcontroller. The SPI interface is an alternative to the Serial or CAN bus interfaces, and provides fast communication on a single board or over short distances.

The SPIClock pin receives the host clock signal. *SPIXmt* signal transmits the synchronous serial data to the host, the *SPIRcv* signal receives the synchronous serial data from the host processor and the active low ~*SPIEnable* should be asserted by the host when Host SPI communication is occurring. The normally high *SPIStatus* signal is asserted low when the command is finished processing by the MC78113 and the data is ready to be received by the host.

The following example schematic in <u>Figure 8-5</u> illustrates the Host communication via the SPI ports. The host controller is the Microchip's dsPIC33FJ64GS606. The microcontroller's SPI port is used for the host SPI communication.



## 8.9 Analog Inputs

The Juno IC products support analog command signal and tachometer analog feedback signal. The following example schematic in Figure 8-6 illustrates the analog conditioning circuit.

The MC78113 is equipped with a 12-bit ADC. The ADC converts from 0 to 3.3V fixed full scale range. The ADC power supply should be decoupled with a low-ESR capacitor. For example, place a 2.2uF ceramic capacitor or a 2.2-6.8 uF tantalum capacitor in parallel with a 0.01-0.1 uF ceramic capacitor as closely as possible to the power supply and ground pins.

The digital value for analog command signal and tachometer analog feedback signal derived from the input analog voltage is determined using the following formula.

Digital value = 0 when input = Vref

Digital value = 32,768 x (input voltage- Vref)/3.3V when 0V <= input <=3.3V

whereVref is 1.65V typical, and the user can set offset value to compensate the offset in the circuit.

Figure 8-6 shows a differential signal conditioning circuit for +/-10V analog command signal. The analog command signal is assumed to be differential, AnalogCmd+ andAnalogCmd-. For single-ended input signal, connect the input signal to AnalogCmd+ and the AnalogCmd- end to ground. The same circuit can be used for tachometer analog feedback signal conditioning.

The differential amplifier stage scales the input signal to the range of 0 and 3.3V as

AnalogCmd= G(AnalgoCmd+-AnalogCmd-)+1.65V

For  $\pm$  -10V input and Vref as1.65V, the gain is G= 0.165.

When R1=R5, and R2=R4, its DC gain is

AnalogCmd = (R1/R2)(AnalogCmd + - AnalogCmd -) + 1.65V

When R1 = R5 = 10.0 kohmsand R2 = R4 = 71.5 kohms, the gain is 0.14, which is slightly lower than 0.165 to accommodate offsets and tolerances. Please use 1% or better grade resistors for better common mode performance

C1 and C3 set the bandwidth of the filter. With C1=C3, the bandwidth is 1/(2\*pi\*R1\*C1). For R1=10.0kohms and C1=680pF, the bandwidth is 23.4kHz.

The low-pass RC filter of R3 and C2 limits the load on the opamp. C2 should be placed close to the ADC input pin, as it partially drives the sample capacitor of the ADC.





## 8.10 Drive-Related Safety and Monitoring Features

This example shows the motor drive-related analog monitoring features. Please refer to <u>Section 8.12, "PWM High/</u> Low Motor Drive With Leg Current Sensing/Control" for leg current sensing functions.

The block of R9, R10, R13 and C5 is for temperature sensing. R13 is a thermistor, and its resistance depends on the temperature. MC78113 will sense the scaled voltage and convert it into temperature reading. C5 need to be tied close to the Temperature pin to improve noise immunity.

In this example, it is assumed that the thermistor is away from the MC78113 and close to the power train, which usually has the highest temperature. Accordingly, C5 is referred to the analog ground, and R13 to digital ground. R10 is optional to improve the noise immunity. If R13 is close to the analog portion, Vcc can be AnalogVcc instead and R13 be tied to the analog ground.

The block of R2, R3, R5 and C3 is for input voltage sensing. This voltage divider will scale the +HV into the range between ground and 3.3V. In this example, it will scale 63V to 3.3V. C3 need to be tied close to BusVoltage pin. The voltage divider is referenced to digital ground while C3 is to analog ground. An optional resistor can be put between R5 and C3 to improve noise immunity as R10 does for temperature sensing function. This block is also a low-pass filter with bandwidth of 1.5kHz. This bandwidth should be selected to respond to real voltage fault event while attenuating bus noise.

U1 is the high side bus current sensing IC. With current sensing resistor R1 at 10mOhm, U1 has a current scaling factor of (13.3/2\*0.01)=66.5mV/A.

U2A is for short circuit protection. R12 and R7 set the protection trigger point, and R6 provides a hysteresis. When Vcc is 3.3V, the trigger point is 1.65V with hysteresis. **~PWMOutputDisable** will go to low and trigger protection when U1 output is over 1.65V, which is (1.65/66.5 mv/A) = 25A.

The output of U1 also goes to U3A, which is a peak-detection circuit. MC78113 will sample the analog input at 20kHz. The peak-detection circuit will hold the maximum peak current reading between the sampling points so MC78113 can detect the maximum current. The necessity of this peak-detection circuit depends on the power train design. For example, if C1 and C2 have big enough capacitance so that the current in R1 will be close to DC, U3A can be a buffer instead.

MC78113 support leg current sensing with current loop control, and R11 and R15 are leg current sensing resistors.



## 8.11 Shunt Resistor Drive

This example shows the shunt function driving a brake resistor.

The power train driven by the MC78113 is capable of regeneration. It could harvest the mechanical energy during slow down or direction reversion and transfer the energy back to the power input. When the input power supply cannot handle the regenerative power, input voltage +HV will go up and over-voltage is possible. The Shunt pin can implement dynamic braking, which will convert the energy into heat and stabilize the +HV voltage.

The shunt signal is controlled based on the input voltage sensing, and it will become active when input voltage is too high.

Shunt is a PWM-based signal and drives MOSFET Q1 through driver U1. When Q1 is turned on, current will flow through R1 and consume energy. When Q1 is turned off, D1 will provide a free-wheeling path for the current in R1 decaying to zero. Q1 and D1 should be sized to handle the current. Also, R1, Q1 and D1 should be sized to handle both the instantaneous power and average power during braking operation.

Upon power up or during reset, the *Shunt* pin is high impedance. In this example, U1 has internal pull-down resistor to ensure Q1 is off. If a different driver is used a pull-down or pull-up resistor might be necessary to ensure the shunt function is off for safe power up and reset.



## 8.12 PWM High/Low Motor Drive With Leg Current Sensing/Control

This section presents several design examples PWM high/low motor drive with leg current sensing. The examples focus on different priorities including power rating, cost, and noise immunity. Also, although specific motor type is shown in the examples, the design considerations apply to all motor types.

#### 8.12.1 Leg Current Sensing

Figure 8-9 shows an example for leg current sensing. Only phase A is shown here while the design for other legs are the same.

This example has two functional sections. The first is the current sensing sensor, and the second is the analog signal conditioning circuit.

In this example, the leg current sensor is a resistor, R2. Q1 and Q2 are the half-bridge power train for motor winding phaseA. Current sensing resistor R2 senses the leg current in Q2, which equals the motor winding current when Q2 conducts.

Q2 is switching at the PWM frequency, and the voltage drop on R2 is proportional to the motor winding current when Q2 is on. Therefore, the voltage signal is also a chopping signal. MC78113 always sample the signal when Q2 is on to ensure an accurate reading. Also, the voltage drop can be positive, negative or zero depending on the winding current direction.

U1 and the passive parts are the analog conditioning circuit. It scales and filters the voltage signal on R2 and input to the MC78113 ADC input pin CurrentA.

U1A is configured as a differential amplifier with R3=R5 and R1=R6. It amplifies the voltage drop across R2, which is the differential voltage. It also attenuates the common mode noise including the noise on the power train.

D1 provide a 1.65V voltage bias source as half the 3.3V ADC range. This bias can be shared with current sensing stages of other phases. With this voltage bias, MC78113 can sense R2 current in either direction.

By default, the MC78113 takes 1.65V reading as zero current. The MC78113 provides commands to compensate the error introduced by the offsets and tolerances of the current sensing circuit.

R4 and C1 is a low pass filter to reduce output noise. It also alleviates the signal glitch due to ADC sampling. R4 and C1 have to be placed close to MC78113 CurrentA pin. Please note, because the signal on R2 is a chopping signal at the PWM frequency, the bandwidth of R4 and C1 should be much higher than the PWM frequency preventing signal distortion/delay.

The gain of the current sensing circuit is

 $V_{CurrentA} = I_{leg} R2 R1/R3 + 1.65$ 

For this example, it is

 $V_{CurrentA} = I_{eg}*0.02*54.9/10.0+3.3/2= 0.1098*I_{eg}+1.65$ 

I\_leg is defined as positive flowing from the ground to Q2 as shown in the schematic. It is because the current out of the half bridge and into motor winding is defined as positive.

Therefore, the current sensing range is  $\pm 15$ A. This current range should include the peak current during dynamic regulation. For example, during acceleration, the instantaneous current could be twice of the continuous current or even more.

With the continuous current and peak current known, the power rating of the current resistor can be determined. The conservative design rule is to assume that the current will go through R2 continuously, and the power dissipation is  $I^{2*}R_2$ . However, the current will only flow through the resistor when Q2 is on; that is, if the duty cycle is known for this leg, the power dissipation can be approximated as  $I^{2*}R_2^*(T_{O2ON}/T_{PWM})$  and resistor can be sized accordingly.

The board layout is critical for an optimal current sensing signal. The current sensing traces (to R3/R5) should be separated from the power path through R2, and these two traces should be routed in pair to improve its common-mode noise immunity. Also, a motor power train has multiple current sensing resistors, and these resistors are referred to ground. During layout, please treat those ground traces (e.g. trace to R5) as separated traces for each leg.





This page intentionally left blank.

#### 8.12.2 Low Cost DC Motor Drive

This example presents a low-cost, high performance DC motor drive.

The power train shown is an H-bridge (two half-bridge) for DC motor winding Motor+ and Motor-. The input voltage can be up to 24V. It is capable of driving 1A continuous current with peak current of 2A.

The design for the two half-bridges and their current sensing circuits are the same. Using Motor+ as an example, the half bridge has a P-channel MOSFET as the upper switch and an N-channel MOSFET as the lower switch, which is driven by PWMHighA and PWMLowA through buffer U1.

During normal operation, PWMLowA is active low. A logic "0" will generate 5V output at U1B, which turn on the lower N-channel MOSFET. R15, R7 and D5 provide an unsymmetrical turn-on and turn-off capability.

PWMHighA is active high. A logic "1" will generate 0V output at U1A, which will pull C2 to ground. +HV will charge C2 through D1 and R1 with voltage clamped by D1 (5.1V typical). This clamped voltage will turn on the P-channel MOSFET. When PWMHighA is "0", U1A outputs 5V, and C2 will discharge and turn off the P-channel MOSFET. R3, D3 and R5 provide an unsymmetrical turn-on and turn-off capability.

The MC78113 allows the user to configure the active polarity of all PWMs.

Upon power up or during reset, PWMHighA and PWMLowA outputs are high impedance. Therefore, pull-up resistor R13 and pull-down resistor R9 are used to ensure that the upper and lower switches are all off. Also, when a hard fault is triggered, PWMHighA and PWMLowA will go into high impedance, and R13 and R19 will turn off the MOSFET and put the output of the half bridge into high impedance.

R11 is the current sensing resistor, and U2A is the differential amplifier for signal conditioning. Please see <u>Section</u>. <u>8.12.1, "Leg Current Sensing"</u> for more design considerations on leg current sensing.

This design has a low BOM cost and a small board footprint suitable for cost-sensitive or size-sensitive applications. However, its limits are also obvious. For example, the MOSFET driver's driving capability is limited by U1, and current capability is limited by the P-channel MOSFET. Therefore, this design is a good candidate for low voltage and low current applications. For higher voltage and higher current applications, please refer to following examples for halfbridge design.



#### 8.12.3 Step Motor Drive

This example shows a step motor drive with leg current sensing. The power train has four half-bridges for the step motor's four winding terminals. The input voltage in this example can be up to 56V. It is capable of driving 5A continuous current with peak current of more than 10A.

The design considerations for the four half-bridges and their current sensing circuits are the same. Using PhaseA+ as example, the half bridge uses N-channel MOSFETs for both the higher and the lower switches to achieve high efficiency. The half bridge is driven by PWMHighA and PWMLowA through MOSFET driver U1, which is powered by 12V.

During normal operation, PWMHighA and PWMLowA are active high. For PWMLowA, a logic "1" turns on the MOSFET Q3. R5, R6 and D3 provide an unsymmetrical turn-on and turn-off capability.

A logic "1" PWMHighA will turn on Q1. C3 is the bootstrapping capacitor, and it is charged through D1 when Q3 is turned on. C3 provides the power to turn on Q1, and C3 needs to be a low-ESR capacitor such as a ceramic capacitor. D1 should be a fast switching diode with low leakage current, and its voltage rating should be chosen based on +HV and the +12V. R3 is optional; it can limit the charging current, especially during power up when C3 is zero voltage. R1, R4 and D2 provide an unsymmetrical turn-on and turn-off capability.

Upon power up or during reset, PWMHighA and PWMLowA output are high impedance. Therefore, pull-down resistors R13/R14 ensure that the upper and lower switches are all off so that the half bridge output is high impedance. Also, when a hard fault is triggered, PWMHighA and PWMLowA will go into high impedance, and the pull-down resistors will turn off the MOSFETs and put the output of the half bridge into high impedance. Usually the MOSFET driver has internal pull-up or pull-down resistors, and the user needs to check the driver's datasheet and decide if the resistors are necessary.

R9 is the current sensing resistor, and U3 is the differential amplifier for signal conditioning. Please see <u>Section 8.12.1</u>, <u>"Leg Current Sensing"</u> for more design considerations on leg current sensing.

This design uses dedicated MOSFET drivers and N-channel MOSFETs to achieve high efficiency and high performance. This example provides a balanced design reference between performance and cost for applications up to 56V and current up to 10A. With different MOSFETs, higher voltage and current capabilities can be achieved. Please refer to the low cost DC drive example if cost is critical and to BLDC drive example for high voltage and/or high current applications in noisy environments.



Ð

Ð

R14 10.0k

R13 10.0k

PVMHghA



4.7u Cts

4.7u

+I2V >>+

 $\rightarrow$ 

Figure 8-11: Step Motor Drive with Leg

8

5

#### 8.12.4 Brushless DC Motor Drive

This example shows a brushless DC motor drive with leg current sensing. The power train has three half-bridge for BLDC motor's three winding terminals. The input voltage in this example can be up to 56V. It is capable of driving 15A continuous current with peak current of more than 25A.

The design considerations for each half-bridge and their current sensing circuits are the same. Using PhaseA+ as example, the half bridge uses N-channel MOSFETs for both the higher and the lower switch to achieve high efficiency. The half bridge is driven by PWMHighA and PWMLowA through MOSFET driver U4, which is powered by 15V.

During normal operation, PWMHighA and PWMLowA are active high. For PWMLowA, a logic "1" turns on the MOSFET Q3. R25, R26 and D3 provide an unsymmetrical turn-on and turn-off capability.

A logic "1" PWMHighA will turn on Q1. C11 is the bootstrapping capacitor, and it is charged through D1 when Q3 is turned on. C11 provides the power to turn on Q1, and C11 needs to be a low-ESR capacitor such as a ceramic capacitor. D1 should be a fast switching diode with low leakage current, and its voltage rate should be chosen based on +HV and the +15V. R23 is optional; it can limit the charging current, especially during power up when C11 is zero voltage. R20, R24 and D2 provide an unsymmetrical turn-on and turn-off capability.

Upon power up or during reset, PWMHighA and PWMLowA output are high impedance. Therefore, pull-down resistors R36 and R37 ensure that the upper and lower switches are all off so that the half bridge output is high impedance. Usually the MOSFET driver has internal pull-up or pull-down resistors, and the user needs to check the driver's datasheet and decide if the resistors are necessary.

The MC78113 has an AmplifierEnable output, and it is used to shut down the MOSFET driver through the SD pin. Upon power up or during reset, AmplifierEnable is high impedance, and pull-down resistor R19 will ensure all motor output high impedance. When AmplifierEnable pin is used, the pull-down resistors R36/R37 are options.

R29 is the current sensing resistor, and U1A is the differential amplifier for signal conditioning. Please see <u>Section</u> <u>8.12.1, "Leg Current Sensing"</u> for more design considerations on leg current sensing.

This design uses dedicated MOSFET drivers and N-channel MOSFETs to achieve high efficiency and high performance. This example is suitable for applications in high noise environments. The MOSFET driver U4 has two ground references: Vss for the digital side and COM for the power side. The MOSFET turn-on and turn-off current out of pin LO will return from dedicated traces to pin COM instead of ground plane, which makes the board layout easier for noise immunity. The COM connection scheme shown also applies for H-bridge and 3-phase MOSFET driver with dedicated COM pin. For this example with independent half-bridge MOSFET drivers, COM pins can also be connected to respective MOSFET source pins to further improve the driving performance. Please refer to the low cost DC drive example if cost is critical and to the Stepper drive example for general-purpose applications.



Figure 8-12: BLDC Motor Drive - Leg Current Sensing

8

#### Figure 8-13: BLDC Motor Drive - Power Train

8


This page intentionally left blank.

#### 8.12.5 Brushless DC Motor Drive With Intelligent Power Module

Intelligent power modules integrate a power train, gate driver and protection circuitry into a single package. They have advantages of simply design, improved system reliability and fast time-to-market. This schematics show an example of a BLDC drive with an intelligent power module with current capability of 1A.

The module operates in the same way as the discrete solution as shown in previous sections. Please refer to the section on BLDC motor power train and step motor drive power train for details.

Because intelligent power modules have control signals and a noisy power train in one package some special filters might be required. Please refer to the specific power module's user guide for details.





Figure 8-14: BLDC Drive with Intelligent Power Module

8

# 8.13 Using the TI LMD18200 to Drive DC Brush Motors

In the following schematic, a magnitude and direction *PWM* signal is used to drive a DC brush motor with a nominal 24V, 2A drive. The H-bridge driver selected for this task is the LMD18200, which can be driven directly from a 3.3V CMOS logic output and as such can be directly interfaced to the MC78113.

There are two methods in which the output current of the H-bridge may be controlled.

First, in the *locked anti-phase control* mode (see the LMD18200 data sheet), a 50/50 **PWM** signal is applied to the LMD18200 DIR input, while the PWM input is tied high. The current ripple in this mode is relatively high, as the circulating currents are quickly decaying.

Second, in *the sign/magnitude control* mode, sign and magnitude *PWM* signals are applied to both the PWM and DIR inputs of the LMD18200. In this mode, the resultant current ripple is reduced resulting in smoother operation of the motor. When the acceleration/deceleration requirements for the motor are not high, the sign/magnitude PWM control mode is preferred. This method is demonstrated in the example.

The LMD18200 is equipped with an internal overcurrent circuit, which is tuned to a 10A threshold. External overcurrent circuitry may be added for currents with a lower threshold by using the sense output. In order to detect malfunctions, the **Vsense** signal may be used to sense the amount of current flowing through the motor windings. The sense output of the LMD18200 samples only a fraction of the drive current, with a typical 377  $\mu$ A sensing per 1A driving current.



8

Note that the circuitry provided in this section does not provide active current control. See <u>Section 8.12, "PWM</u> <u>High/Low Motor Drive With Leg Current Sensing/Control"</u> for PWM-based application examples using the MC78113 IC that provide active current control.



## 8.14 Two Juno Step Motor Amplifiers With Multi-Axis Magellan

The following schematic shows a two-axis application with two 56-pin VQFN packaged Juno Step motor ICs with a multi-axis Magellan.

In this schematic the host controller is a four-axis Magellan MC58420. Only the connections with MC75113N and MC74113N are shown. For complete Magellan wiring, please refer to the *MC58000 Electrical Specifications*.

#### 8.14.1 MC75113N Axis 1

For Axis 1, the MC75113N receives *Pulse*, *Direction* and *AtRest* from Magellan and controls the motor with PWM high/ low and leg current sensing. Please refer to <u>Section 8.12.3</u>, "Step Motor Drive " for more details.

#### 8.14.2 MC74113N Axis 2

For Axis 2, the MC74113N receives *Pulse*, *Direction* and *AtRest* from Magellan and controls the motor with PWM high/ low and leg current sensing. Please refer to <u>Section 8.12.3</u>, "Step Motor Drive." for more details.

Compared to Axis 1 with MC75113N, MC74113N receives encoder input for continuous encoder position comparison.



## 8.15 Two Juno BLDC Motor Amplifiers With Multi-Axis Magellan

The following schematic shows a two-axis application with two Juno BLDC motor amplifiers in torque mode with a multi-axis Magellan.

### 8.15.1 SPI Communication

MC73113 receives control commands through an SPI interface and functions as an SPI slave. The MC58420 will output a continuous stream of desired torques to each MC73113 via SPI. SPI communication is enabled when ~SPIEnable is pulled down. Only one MC73113 can be enabled at any given time.

In this schematic the SPI master is a four-axis Magellan MC58420. Only the connections with MC73113 are shown. For complete Magellan wiring, please refer to the *MC58000 Electrical Specifications*. In this example, axis 1 and axis 2 are under control. The MC58420 sends torque commands to MC73113s by pulling *SPIEnable1* and *SPIEnable2* low, respectively.

#### 8.15.2 MC73113 Axis 1

For Axis 1, the MC73113 is in torque mode with encoder-based commutation. It receives torque command from Magellan and controls the motor with PWM high/low and leg current sensing. Please refer to <u>Section 8.12.4</u>, <u>"Brushless DC Motor Drive"</u> for more details

The encoder signals go to both Magellan and MC73113. Magellan uses the encoder information for position control while MC78113 for commutation.

### 8.15.3 MC73113 Axis 2

For Axis 2, the MC73113 is in torque mode with Hall-based commutation. It receives torque command from Magellan and controls the motor with PWM high/low and leg current sensing. Please refer to <u>Section 8.12.4</u>, "Brushless DC <u>Motor Drive</u>" for more details.

Magellan uses the encoder information for position control, and MC73113 uses Hall signals for commutation.



This page intentionally left blank.